
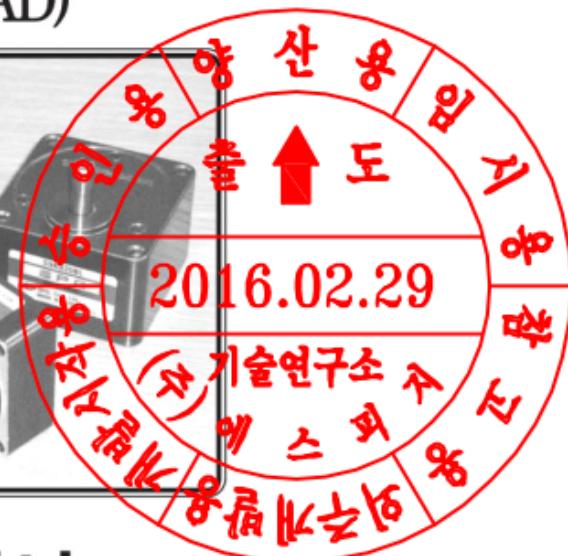


사용설명서

감속기(GEAR HEAD)

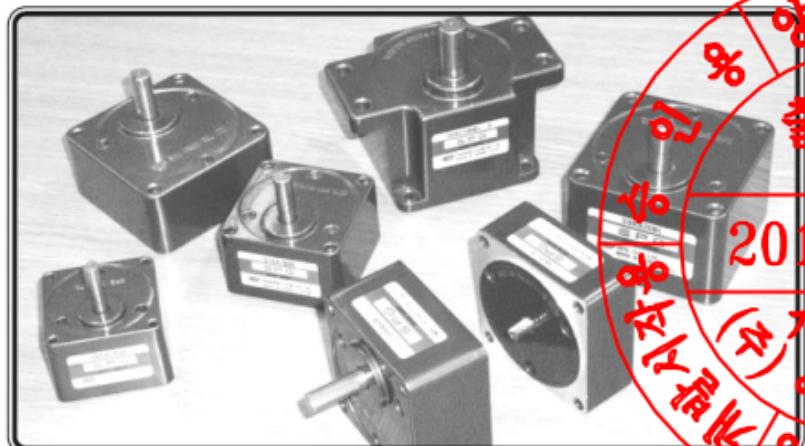

SPG Co., Ltd.

<http://www.spg.co.kr>

21C, for world geared motor!

1. KOREAN (한국어).....	P.1
2. ENGLISH	P.15
3. JAPANESE	P.31
4. CHINESE	P.45

SMALL STANDARD MOTOR SERIES

- INDUCTION MOTOR (인덕션 모터)
- REVERSIBLE MOTOR (리버시블 모터)
- ELECTRO-MAGNETIC BRAKE MOTOR (전자브레이크 부착 모터)
- TERMINAL BOX MOTOR (단자박스 부착 모터)
- SPEED CONTROL MOTOR (속도 조정용 모터)
- PACK IN TYPE SPEED CONTROL MOTOR
(속도 조정기 부착 일체형 모터)
- STANDARD GEAR HEAD (모터용 감속기)
- SPEED CONTROLLER (속도 조정기)
 - SR PACK TYPE (팩타입 일반 속도 조정기)
 - SS PACK TYPE (팩타입 고급 속도 조정기)
 - SH PACK TYPE (팩타입 고급 속도 조정기)
 - UNIT ANALOGUE TYPE (아날로그 속도 조정기)
 - UNIT DIGITAL TYPE (디지털 표시 속도 조정기)
- BRAKE PACK (모터 제동용 전기 브레이크)
 - CONTACT TYPE (접점 방식)
 - NON CONTACT TYPE (무접점 방식)
- OPTION
 - MOUNTING PLATE (취부판)
 - EXTENSION CABLE (연장선)
 - SURGE ABSORBER (SURGE전압 흡수용 회로)
 - EXTERNAL SPEED CONTROLLER (외부 속도 설정기)
 - BRAKING EXTERNAL RESISTOR (제동용 외부 저항기)

〈목 차〉

1. 제품 인수시의 확인	P. 1
2. 제품의 특징	P. 4
3. 주의사항	P. 4
4. 제품의 설치 및 조립	P. 8
5. OPTION품과의 조립	P. 12
6. 비정상 동작 시 점검 항목	P. 13
7. A/S 절차 안내	P. 14

안녕하십니까? 에스피지 입니다.

에스피지의 제품을 구입해 주셔서 대단히 감사합니다.

본 제품을 사용하시기 전에 반드시 사용 설명서를

잘 읽고, 제품에 관한 지식, 안전정보 그리고 주의사항

전반에 관해 숙지 하신 후 바르게 사용하여 주십시오.

읽으신 후에는 언제든지 참고할 수 있도록 반드시

일정 장소에 보관하여 주십시오.



1. 제품 인수시의 확인

1.1 제품의 확인

다음과 같은 부품이 모두 갖추어져 있는지 확인하여 주십시오.
만일, 부족할 경우나 파손되어 있을 경우에는 가까운
본사 영업부나 대리점으로 연락하여 주십시오.

- 감속기 (GEAR HEAD) 1대
- 취부용 BOLT, NUT, 평와셔, SPRING 와셔 각4개
- 평행 KEY 1개
(출력축에 키홀 가공이 없는 것에는 들어있지 않습니다.)
- 사용 설명서 (본책자) 1부

1.2 조립용 BOLT 치수표

• S series

크기	기종명	감속비	볼트길이	종류	
□ 60mm	S6KT□B	3~18	M4*P0.7*L45	동근머리 BOLT	
		20~250	M4*P0.7*L55		
	S6KA□B	3~18	M4*P0.7*L50		
		20~250	M4*P0.7*L60		
	S6GX10B	10	M4*P0.7*L90		
	S7KA□B	3~18	M5*P0.8*L55		
□ 70mm		20~200	M5*P0.8*L65		
		10	M5*P0.8*L100		
□ 80mm	S8KA□B	3~18	M5*P0.8*L55	육각 구멍붙이 BOLT	
		20~200	M5*P0.8*L65		
	S8GX10B	10	M5*P0.8*L100		
□ 90mm	S9KB□BL(H)	3~18	M6*P1.0*L75	육각 구멍붙이 BOLT	
		20~200	M6*P1.0*L85		
		10	M6*P1.0*L122		
	S9KC□BL(H)	3~200	M6*P1.0*L95		
	S9KC□BL(H)-S	3~200	M6*P1.0*L25		
	S9KD□B	3~200	M6*P1.0*L20		
	S9GX10B-S	10	M6*P1.0*L130		
	S9KH□B	3~200	M6*P1.0*L20		

• SG series

크기	기종명	감속비	볼트길이	종류
□ 60mm	SG6KA□	5~25	M4*P0.7*L50	육각 구멍붙이 BOLT
		30~120	M4*P0.7*L55	
		150~360	M4*P0.7*L60	
□ 70mm	SG7KA□	5~120	M6*P1.0*L70	
		150~360	M6*P1.0*L75	
		5~25	M6*P1.0*L65	
□ 80mm	SG8KA□	30~120	M6*P1.0*L70	
		150~360	M6*P1.0*L75	
		5~18	M8*P1.25*L75	
□ 90mm	SG9KB□	20~100	M8**P1.25*L90	육각 구멍붙이 BOLT
		120~300	M8**P1.25*L95	
		5~15	M8**P1.25*L75	
	SG9KC□	18~40	M8**P1.25*L90	
		50~200	M8**P1.25*L100	

1.3 KEY 및 KEY 홈 치수도 (단위 mm)

- S series

□ 60		
□ 70 □ 80 □ 90 (40W)		
□ 90 (60~200W)		

- SG series

□ 60 □ 70		
□ 80		
□ 90		

구입하신 제품에 맞는 KEY가 첨부되었는지 확인하시고, 이상이 발견 되었을 경우 즉시 구입점에 문의하여 주시기 바랍니다.



2. 제품의 특징

2.1 제품의 특징

2.1.1 감속기란 (GEAR HEAD)

- GEAR를 이용한 속도 변환기로써, 구동원(MOTOR)의 회전수를 필요한 회전수로 감속하는 동시에 큰 TORQUE를 얻을 수 있는 기구적인 장치입니다.

2.1.2 GEAR HEAD의 특징

- 소형으로 전달 능력이 큽니다.
- 미끄러짐이 생기지 않아 감속비가 매우 일정합니다.
- 감속비를 광범위하게 선택합니다.
- 내구성이 있습니다.

2.1.3 감속비


- 서로 맞물린 치차에서 피동치차의 잇수를 구동치차의 잇수로 나눈 값이며 당사에서는 구동원(MOTOR)의 SHAFT와 감속기어부를 헬리컬치차로 정밀 가공한 결과 종래의 감속기와 비교하여 볼 때 10~15dB의 대폭적인 저소음을 실현하였습니다.

3. 주의 사항


3.1 사용상 주의 사항

3.1.1 사용 조건

- 사용시의 주위 온도범위는 $-10\sim40^{\circ}\text{C}$, 습도는 85% 이하에서 사용하여 주십시오.
- 직사광선이나 물, 기름이 많은장소는 피해 주십시오.
- 진동, 충격이 심한 곳이나 먼지가 많은 곳, 인화성 가스, 부식성 가스가 발생하는 장소는 피해주십시오.

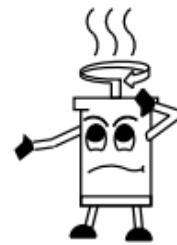


3.1.2 OVERHUNG 하중과 THRUST 하중

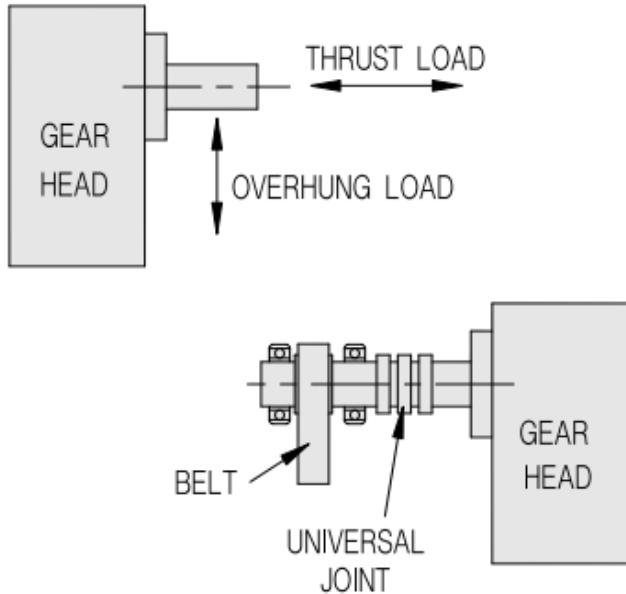

(그림 3-1)

- 전달기구에 HELICAL GEAR, WORM GEAR 등을 사용하는 경우에는 OVERHUNG 하중과 동시에 THRUST 하중의 허용치를 초과하지 않도록 사용하여 주십시오.
- 또한 출력축에 직접 부하를 연결하여 사용하는 경우에는 편단 하중 때문에 GEAR HEAD에 가깝게 부하를 취부하여 주십시오.

(그림3-1)과 같이 OVERHUNG 하중에 견딜 수 있는 구조로 설치하여 주십시오.
(OVERHUNG 하중의 계산 식은 카다로그를 참조하여 주십시오.)

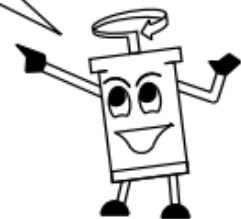

- 허용 하중표는 다음 페이지에 있습니다.

- 허용 OVERHUNG 하중과 허용 THRUST 하중표
S series

기종명	감속비	최대 허용 TORQUE	허용 OVERHUNG 하중	허용 THRUST 하중
			kgf·cm	kg
S6DT□B	3~18	0.5~3	5	3
	20~250	3~15		
S6DA□B	3~18	1~6	6	3
	20~250	6~30		
S7KA□B	3~18	3~18	10	4
	20~200	20~50		
S8KA□B	3~18	2~25	12	5
	20~200	30~80		
S9KB□B(0)	3~18	4~40	30	10
	20~200	40~100		
S9KC□(0)	3~10	8~40	45	15
	12.5~20	40~80		
S9KC□B0-S	25~60	50~200	52	15
	75~200			
S9KD□B S9KH□B	3~200	18~300	55	

SG series

기종명	감속비	최대 허용 TORQUE	허용 OVERHUNG 하중		허용 THRUST 하중
			출력축 끝단부터 10mm	출력축 끝단부터 20mm	
SG6KA□	5~9	60	10	15	4
	10~25		15	20	
	30~360		20	30	
SG7KA□	5~9	100	15	20	8
	10~25		20	30	
	30~360		30	40	
SG8KA□	5~9	160	20	25	10
	10~25		30	35	
	30~360		45	55	
SG9KB□	5~9	300	40	50	15
	10~25		45	60	
	25~300		50	70	
SG9KC□	5~9	400	40	50	15
	10~25		45	60	
	25~200		50	70	

3.1.3 GEAR HEAD의 최대 허용 TORQUE

- GEAR HEAD의 출력 TORQUE는 감속비에 비례하지만 GEAR의 재질등 기타 조건에 의해 GEAR HEAD에 미치는 허용 TORQUE는 한정되는데 이것을 최대 허용 TORQUE라고 하며, GEAR HEAD의 크기, 감속비에 따라 규정하고 있습니다.
- 예를 들면, INDUCTION MOTOR 40W와 감속비 1/100를 결합했을때 S9I40GB의 정격 TORQUE는 2.5kg·cm이므로,

$$T_G = T_M * i * \eta = 2.5 * 100 * 0.66 \\ = 165 \text{kg} \cdot \text{cm} \text{가 됩니다.}$$

T _G	: GEAR HEAD의 출력축 TORQUE
T _M	: MOTOR의 TORQUE
i	: GEAR HEAD의 감속비
η	: GEAR HEAD의 전달효율

그러나, 계산상 165kg cm라 하더라도 S9KB100B의 최대허용 TORQUE는 100kg cm로 규정합니다.

- GEAR HEAD의 전달 효율 및 회전 방향

(중간 감속기 전달 효율은 81%입니다.)

 MOTOR와 같은 방향

 MOTOR와 반대 방향

S series

감속비 기종명	3~10	12.5~18	20	25~40	50	60	75~200	250
S6DA(T)□B								
S7KA□B		81%			73%			
S8KA□B							66%	
S9KB□BH(L)								
S9KC□BH(L)								
S9KD□B	81%			73%			66%	
S9KH□B								59%


SG series

감속비 기종명	5~18	20	25	30~60	75~100	120	150~200	250~300	360
SG6KA□									
SG7KA□				90%			86%		
SG8KA□								81%	
SG9KB□		90%			86%			81%	
SG9KC□	90%			86%				81%	


4. 제품의 설치 및 조립

4.1 MOTOR와 GEAR HEAD의 조립 방법

- 일반 HEAD

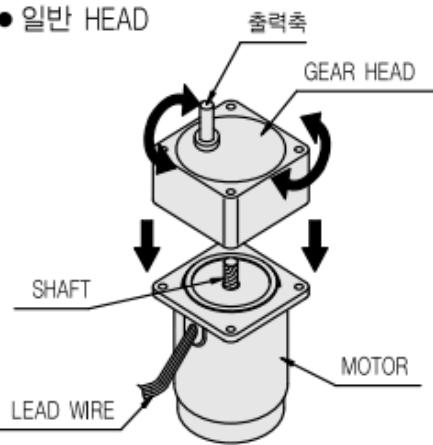


- FLANGE HEAD

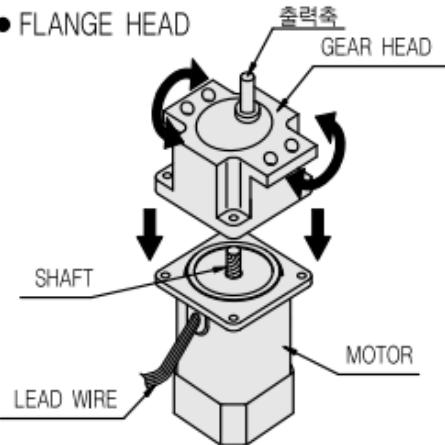

주의


MOTOR와 GEAR HEAD를 무리하게 조립하거나 GEAR HEAD에 금속 파편등의 이물질이 들어가면 SHAFT 치절부나 GEAR에 기스가 생겨서 이상음이 발생하거나 수명이 떨어지는 등 뜻하지 않은 사고의 원인이 되니 각별히 유의하여 주십시오.

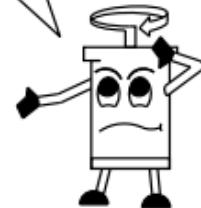


- ① MOTOR SHAFT부를 위로 하고, MOTOR의 LEAD WIRE가 인출된 방향과 GEAR HEAD의 출력축 방향의 조립 위치 선정을 하십시오.
- ② MOTOR의 SHAFT부 GEAR와 GEAR HEAD 내부의 GEAR가 강하게 닿거나 부딪히지 않도록 GEAR HEAD를 좌, 우로 조금씩 회전시키면서 서서히 조립해 주십시오.
- ③ MOTOR와 GEAR HEAD의 SET 축부시에는 부속의 축부 BOLT를 사용하여 주십시오.

4.2 설치할 때의 주의


- 설치판에 구멍을 뚫고, GEAR HEAD 부속나사(BOLT) 4개를 사용하여, MOTOR와 GEAR HEAD를 설치면에 고정시켜 주십시오.
이때 MOTOR 플랜지면과 GEAR HEAD 삽입구 단면에 틈이 생기지 않도록 주의하여 주십시오.
- GEAR HEAD와 MOTOR를 SET로 접속하는 경우 부속품 조립용 BOLT를 사용하여 주십시오.
조립판의 두께는 BOLT의 결합 길이를 충분하게 하기 위하여 5mm 이하로 사용하여 주십시오.

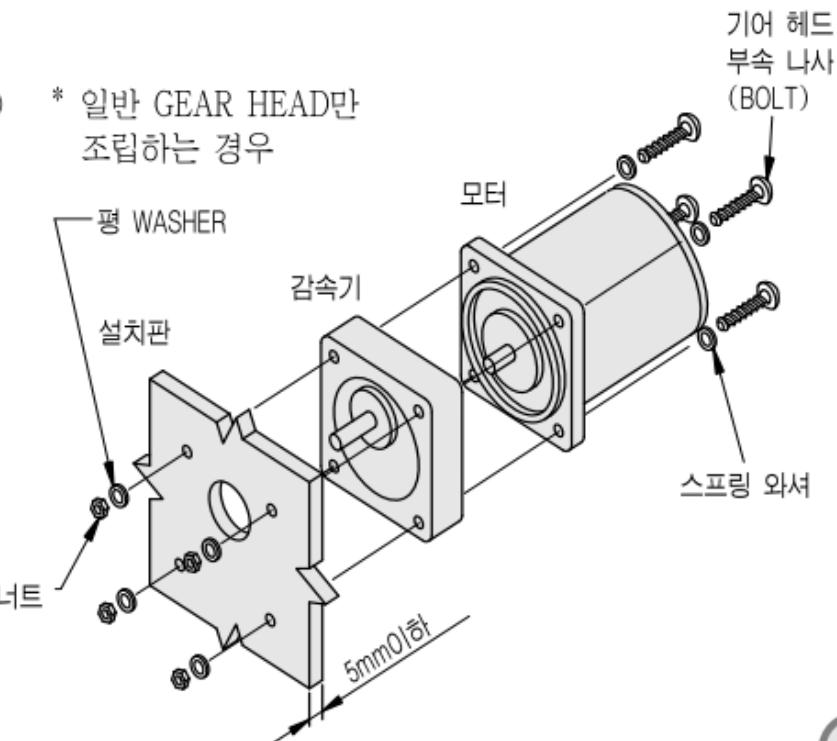

* 일반 감속기와
중간 감속기를
모두 조립하는 경우

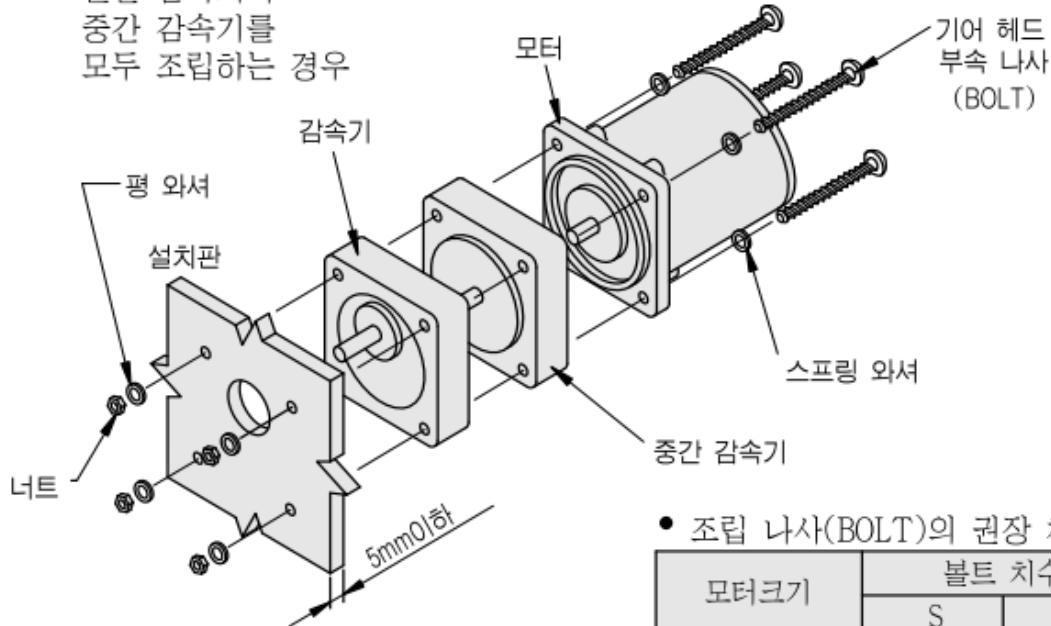


- 중간 감속기의 제품 출하 시 나사 (BOLT)는 고감속비용 SIZE 1종류만 포장하므로 감속기의 두께에 따라 두께에 따라 별도의 조립 BOLT를 준비하여 주십시오.

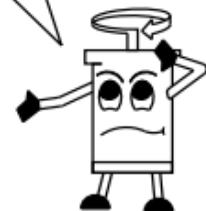


• 조립 나사(BOLT)의 권장 조임 TORQUE

모터크기	볼트 치수		권장 조임 TORQUE
	S	SG	
□ 60	M4	M4	2.0N·m(20kgf·cm)
□ 70	M5	M6	2.5N·m(25kgf·cm)
□ 80	M5	M6	2.5N·m(25kgf·cm)
□ 90	M6	M8	3.0N·m(30kgf·cm)

4.3 전달 부품의 조립

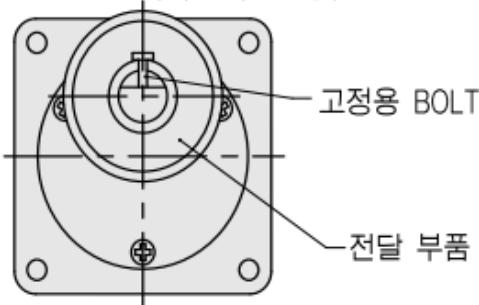


- GEAR HEAD의 출력축은 외경공차를 h7으로 해서 전달 부품의 조립을 위한 KEY 홈 또는 D-CUT 가공이 있습니다.
- D-CUT 가공인 경우에 D-CUT 가공부에 부하가 공회전하지 않도록 BOLT를 사용하여 확실하게 고정하여 주십시오.
- KEY 홈 가공인 경우에는 전달기구인 CHAIN, PULLEY, SPROCKET 등에 KEY 홈을 가공하여 부속품 KEY를 사용하여 고정하여 주십시오.

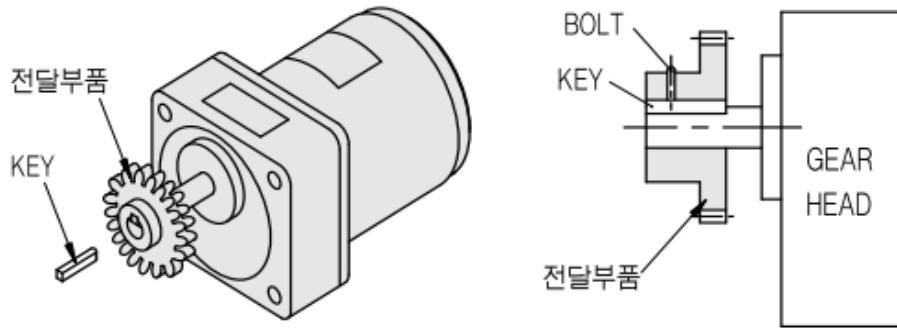

주의


GEAR HEAD 축에 전달 기구를 고정시킬 때 충격을 가하면 GEAR HEAD의 파손, 수명 단축의 원인이 되므로 각별히 주의하십시오.

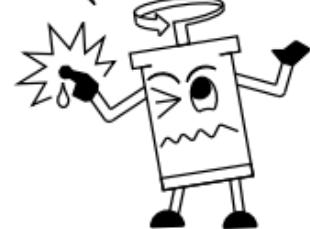


5. OPTION과의 조립

5.1 취부 PLATE의 조립

5.1.1 취부 PLATE의 설치

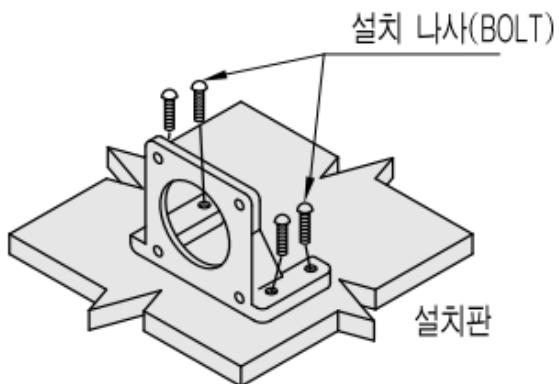

5.1.2 GEARED MOTOR와의 조립

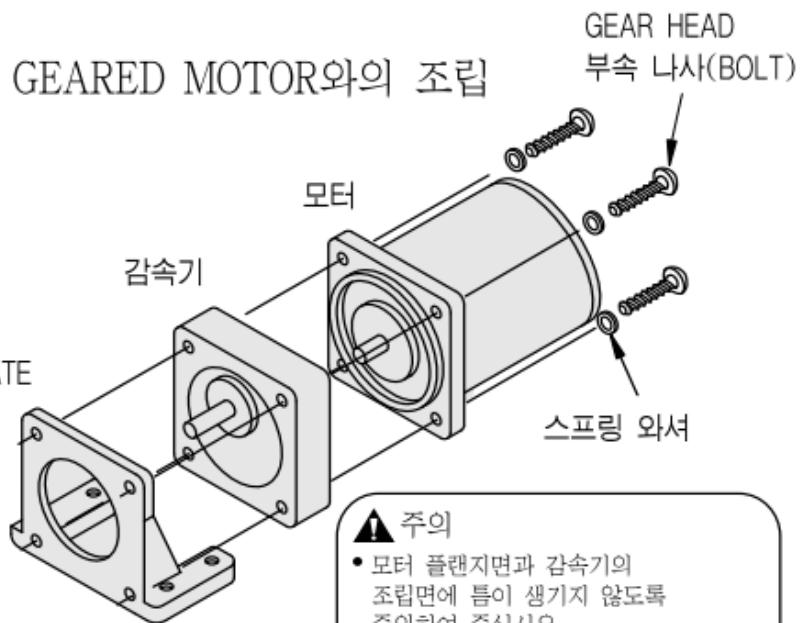

주의

- 모터 플랜지면과 감속기의 조립면에 틈이 생기지 않도록 주의하여 조립하십시오.
- 모터의 샤프트부 기어(GEAR)와 감속기 내부의 기어가 강하게 달거나 부딪히지 않도록 주의하여 조립하십시오.
- 모터 동작 시 소음의 원인이 됩니다.

6. 비정상 동작시 점검 항목

MOTOR 및 GEAR HEAD가 정상적으로 작동하지 않을 경우는, 아래표를 참고로 점검하여 주십시오.

점검 결과가 모두 정상임에도 불구하고 MOTOR가 바르게 작동하지 않을 경우는, 수리 분해 개조를 하지 마시고, 가까운 본사 영업부나 대리점으로 연락하여 주십시오.

현상	확인 내용
출력축이 회전하지 않는다. 또는 저속으로 회전한다	<ul style="list-style-type: none"> ① 모터에 정격 전압이 가해져 있습니까? ② 전원과의 접속은 바르게 연결되어 있습니까? ③ 부하가 너무 크지 않습니까? ④ 부속 케페시터 또는 명판에 기재되어 있는 용량의 케페시터가 '결선도' 대로 접속되어 있습니까?
역방향으로 회전한다.	<ul style="list-style-type: none"> ① '결선도'와 다르게 접속되어 있지 않습니까? '결선도'를 다시 한번 확인해 보십시오. ② 감속기의 감속비에 따라서 감속기 출력축의 회전방향이 달라집니다. ③ 보는 방향이 뒤리지 않습니까? 모터 출력축 쪽에서 볼 때 회전방향을 시계방향 또는 반시계 방향이라고 하고 있습니다.

이상한 소리가 들린다.	<ul style="list-style-type: none"> ① 모터와 감속기를 바르게 장착해 두었습니까? ② 모터와 동일한 치질 샤프트 TYPE 감속기를 장착하고 있습니까?
이상없이 회전하던 출력축이 갑자기 멈추어 버렸다.	<ul style="list-style-type: none"> ① MOTOR가 THERMAL PROTECTOR(T/P) 부착 TYPE은 아닙니까? ② 전달기구인 PULLEY 등이 파손되거나 연결 상태가 풀리지는 않았습니까? ③ MOTOR 또는 GEAR HEAD의 수명이 다한 것은 아닙니까? (수명은 카다로그 참조.) ④ 출력축이 부러지지는 않았습니까? (만일 부러졌다면 과도한 OVERHANG 하중일 가능성이 있습니다. "3. 사용상 주의 사항"을 참조하여 재 검토를 부탁드립니다.) ⑤ MOTOR는 회전하는데 GEAR HEAD가 회전하지 않는다면 GEAR가 손상되었을 가능성이 있습니다. (만일 손상되었다면 GEAR HEAD의 허용 TORQUE 이상으로 과부하가 작용한 것으로 "3.1.2 GEAR HEAD의 허용 TORQUE"를 참조하여 재 검토를 부탁드립니다.)

7. A/S 절차안내



에스피지에서는 접수된 제품의 불량 내용 및 귀책을 판단하여 무상 또는 유상 수리로 A/S를 처리하고 있으며, 불량의 내용에 따라 제품을 교환하여 드릴 수도 있습니다.



* 대리점 안내

- 각 지역 대리점은 SPG 홈페이지 (www.spg.co.kr)에서 확인하실 수 있습니다.



◎ 구입 제품의 CAD 도면이 필요하신 분은 홈페이지에 접속후 DOWN LOAD 하시기 바랍니다.

※ 제품의 성능개선을 위하여 사양 및 외관은
고객에게 통보없이 변경될 수 있습니다.
기타 자세한 문의사항은 본사 기술연구소, 영업부로 연락바랍니다.



SPG Co., Ltd.

<http://www.spg.co.kr>

■ 본사

인천광역시 남동구 청능대로 289번길 45
(고잔동, 남동공단 67B 12L)

TEL : 82-32-820-8271-5 FAX : 82-32-821-0383

〈 Table of Contents 〉

1. Safety Precautions	15
1.1. General Precautions	
1.2. Operating Precautions	
2. Checking the Contents	16
2.1 Inspection	
2.2 Screw Sizes for Mounting	
2.3 Key and Key Slot Dimensions	
3. Product Features	19
3.1 What is a Gearhead?	
3.2 Gear Ratio	
3.3 Overhung Load Thrust and Thrust Load	
3.4 Maximum Permissible Torque of Gearhead	
4. Assembly	23
4.1 Assembly a Gear Motor	
4.2 Mounting a Gear Motor	
4.3 Assembly a Gear Motor with inter-decimal Gearhead	
4.4 Attaching Transmission	
4.5 Mounting Option with Bracket	
5. Troubleshooting	28
6. Warranty Information	29
6.1 Warranty Period	
6.2 Warranty Limit	

1. Safety Precautions

1.1 General Precautions

The precautions indicated below are intended to prevent danger or injury to the user and to display the correct use of the product. Failure to read and understand these precautions can result in serious, or possibly even fatal, injury and/or damage to the product, related equipment, and systems.

- Only qualified personnel should work on installing, wiring, operating, handling, and inspecting the product.
- Do not use the product in explosive, flammable, or corrosive environments.
- Do not use in areas exposed to splashing water or near combustibles.
- Do not forcibly bend, pull, or pinch the cable.
- Only use the motor for class I equipment to prevent the risk of electric shock.

- To protect against electric shock, install the product within an 'enclosure' in order to avoid direct contact with hands.
- Always connect the protective earth terminals of the motor to the protective earth, and ground securely to prevent electric shock.

1.2 Operating Precautions:

To avoid failures, mechanical damages, and injuries, install products in areas with the following conditions

- Indoors (The products are designed to attach to machines)
- Operating ambient temperature: -10 ~ 40°C (+14 ~ 104°F)
- Operating ambient humidity: under 85%
- No exposure to explosive, inflammable or corrosive gases
- No exposure to continuous vibration or excessive impact.
- No exposure to direct sunlight
- No exposure to splashing water, oil, or dust
- No exposure to radiation
- The maximum height must not exceed 1000m

2. Checking the Contents

2.1 Inspection

Inspect contents of the package thoroughly to ensure that all items below have been received

- Gearhead 1 piece
- Mounting Screw, Nut, Spring Washer 4 pieces each
- Key 1 piece
(Not provided with a flat (D cut) type output shaft of gearhead)
- User Manual 1 copy

If there are any missing items and/ or considerable damage has been discovered, contact a sales representative from whom the motor was purchased, or the sales agent listed on the last page of this manual for assistance.

2.2 Screw Sizes for Mounting

* □ The box within the gearhead model name represents the the gear ratio.

- Standard 'S' series Gearhead

Gearhead Frame Size	MODEL NAME	GEAR RATIO	SCREW	TYPE
60mm 2.36in	S6KT□B	3~18	M4°P0.7°L45	ROUND HEAD BOLT
		20~250	M4°P0.7°L55	
	S6KA□B	3~18	M4°P0.7°L50	
		20~250	M4°P0.7°L60	
	S6GX10B	10	M4°P0.7°L90	
	S7KA□B	3~18	M5°P0.8°L55	
		20~200	M5°P0.8°L65	
	S7GX10B	10	M5°P0.8°L100	
	S8KA□B	3~18	M5°P0.8°L55	
		20~200	M5°P0.8°L65	
80mm 3.15in	S8GX10B	10	M5°P0.8°L100	
		3~18	M6°P1.0°L75	HEXAGON SOCKET HEAD SCREW
	S9KB□BL(H)	20~200	M6°P1.0°L85	
		10	M6°P1.0°L122	
	S9KC□BL(H)	3~200	M6°P1.0°L95	
	S9KC□BL(H)-S	3~200	M6°P1.0°L25	
	S9KD□B	3~200	M6°P1.0°L20	
	S9GX10B-S	10	M6°P1.0°L130	
	S9KH□B	3~200	M6°P1.0°L20	







- Global Type 'SG' series Gearhead

Gearhead Frame Size	MODEL NAME	GEAR RATIO	SCREW	TYPE
60mm 2.36in	SG6KA□	5~25	M4°P0.7°L50	HEXAGON SOCKET HEAD SCREW
		30~120	M4°P0.7°L55	
		150~360	M4°P0.7°L60	
70mm 2.75in	SG7KA□	5~120	M6°P1.0°L70	HEXAGON SOCKET HEAD SCREW
		150~360	M6°P1.0°L75	
		5~25	M6°P1.0°L65	
80mm 3.15in	SG8KA□	30~120	M6°P1.0°L70	HEXAGON SOCKET HEAD SCREW
		150~360	M6°P1.0°L75	
		5~18	M8°P1.25°L75	
90mm 3.54in	SG9KB□	20~100	M8**P1.25°L90	HEXAGON SOCKET HEAD SCREW
		120~300	M8**P1.25°L95	
		5~15	M8**P1.25°L75	
	SG9KC□	18~40	M8**P1.25°L90	
		50~200	M8**P1.25°L100	

[Table 1]






2.3 Key and Key Slot Dimensions

      - Standard 'S' series Gearhead

FRAME SIZE	KEY SLOT	KEY
60 mm		
70 mm 80 mm 90 mm (40W)		
90 mm (60~200W)		

[Table 2]

     - Global Type 'SG' series Gearhead

FRAME SIZE	KEY SLOT	KEY
60 mm 70 mm		
80 mm		
90 mm		

[Note] Check to make sure that the right type and size of key was enclosed in the package. If any discrepancy is found, contact a sales representative from whom the motor was purchased or the sales agent listed on the last page of this manual for any assistance.

3. Product Features

3.1 What is a Gearhead?

- A gearhead is a mechanical device utilized to increase the output torque or change the speed (RPM) of a motor. The motor's shaft, attached to one end of the gearhead, provides a given output torque and speed which is determined by the gear ratio.
- General Features of SPG's Gearhead
 - Compact design with large output torque
 - Wide range of gear ratio from 3~200:1
 - High Durability

3.2 Gear Ratio


- Gear ratios are defined as the correlation between the numbers of teeth of two different gears. Commonly, the number of teeth a gear has is proportional to its circumference. This means that a gear with a larger circumference will have more gear teeth; therefore, the relationship between the circumferences of two gears can also give an accurate gear ratio.

For example, if one gear has 36 teeth while another gear has 12 teeth, the gear ratio would be 3:1. SPG has various types of gearheads ranging from the ratio of 5:1 to 200:1.


- SPG works to develop motor shaft and helical gears through a highly unique and precise process to ultimately reduce the noise level to a remarkable 10-15dB range.

3.3 Overhung Load and Thrust Load

- The overhung load is the load applied at a right angle to the output shaft of the gearhead when the gearhead is coupled to the equipment using a chain, belt, etc., and the thrust load is the load applied parallel to the output shaft, either inward or outward, as shown in Figure 1.

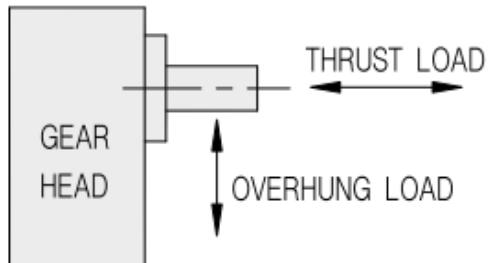

[Figure 1]

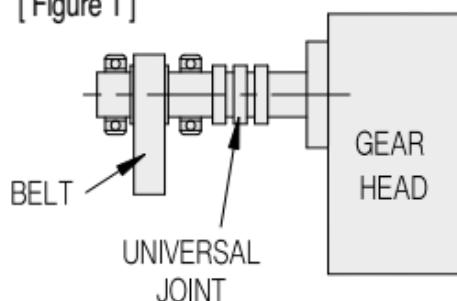

[Figure 2]

- Because the overhung load has a great influence on the life of the bearings and on the strength of the shaft, be careful as to not exceed the permissible values as shown in Table 3. If the overhung load exceeds the permissible torque, an extra support must be installed as shown in Figure 2 to accept the extra overhung load. (Refer to the catalogue for the calculation of overhung load)
- Also, when the load is connected directly to the output shaft, place the load as close to the gearhead as possible to prevent the load from leaning to one side.
- If you are using the helical or worm gear with the transmission part, they are susceptible to both the overhung and thrust load. Ensure that the overhung & thrust load do not exceed the permissible torque value simultaneously.

- Permissible Overhung Load and Thrust Load
Standard 'S' series Gearhead

MODEL NAME	GEAR RATIO	MAX. PERMISSIBLE TORQUE	PERMISSIBLE OVERHUNG LOAD	PERMISSIBLE THRUST LOAD
		kg f·cm	kg	kg
S6DT □ B	3~18	0.5~3	5	3
	20~250	3~15		
S6DA □ B	3~18	1~6	6	3
	20~250	6~30		
S7KA □ B	3~18	3~18	10	4
	20~200	20~50		
S8KA □ B	3~18	2~25	12	5
	20~200	30~80		
S9KB □ B()	3~18	4~40	30	10
	20~200	40~100		
S9KC □ O	3~10	8~40	45	15
	12.5~20	40~80		
S9KC □ B()S	25~60	50~200	52	15
	75~200			
S9KD □ B S9KH □ B	3~200	18~300	55	

Global Type 'SG' series Gearhead

MODEL NAME	GEAR RATIO	MAX. PERMISSIBLE TORQUE	PERMISSIBLE OVERHUNG LOAD		PERMISSIBLE THRUST LOAD
		kg f·cm	10mm FROM THE END OF THE OUTPUT SHAFT	20mm FROM THE END OF THE OUTPUT SHAFT	
SG6KA □	5~9	60	10	15	4
	10~25		15	20	
	30~360		20	30	
SG7KA □	5~9	100	15	20	8
	10~25		20	30	
	30~360		30	40	
SG8KA □	5~9	160	20	25	10
	10~25		30	35	
	30~360		45	55	
SG9KB □	5~9	300	40	50	15
	10~25		45	60	
	25~300		50	70	
SG9KC □	5~9	400	40	50	15
	10~25		45	60	
	25~200		50	70	

3.4 Maximum Permissible Torque of Gearhead

The output torque of the gearhead increases proportionally with the reduction of speed. However, the permissible torque is limited by the mechanical strength of the gear material, as well as other conditions, otherwise known as the maximum permissible torque. The maximum permissible torque is determined by the size of the gearhead and the gear ratio.

Example: The rated torque of 40w induction motor S9I40GBH is 2.5 kgf·cm. If the motor is combined with the 100:1 gearhead, the output torque of the gear motor is calculated as follows:

$$\begin{aligned} T_{GM} &= T_M * i * \eta \\ &= 2.5 * 100 * 0.66 \\ &= 165 \text{ kgf}\cdot\text{cm} \end{aligned}$$

TGM: Output Torque of Gear Motor
 TM : Motor Torque
 i : Gear Ratio
 η : Efficiency of Gearhead
 (Refer to the table below)

The maximum permissible torque for the gearhead S9KB40GB is 100kgf·cm as shown in table 3. Therefore, the output torque of the gear motor that can be exerted is only 100kgf·cm, even if the gearhead has a theoretical output torque of 165 kgf·cm.

Standard 'S' series Gearhead

	GEAR RATIO	3~10	12.5~18	20	25~40	50	60	75~200	250
MODEL NAME									
S6DA(T) □ B									
S7KA □ B			81%			73%			
S8KA □ B									
S9KB □ BH(L)								66%	
S9KC □ BH(L)		81%							
S9KD □ B				73%				66%	
S9KH □ B									59%

Global Type 'SG' series Gearhead

	GEAR RATIO	5~18	20	25	30~60	75~100	120	150~200	250~300	360
MODEL NAME										
SG6KA □										
SG7KA □				90%				86%		
SG8KA □										
SG9KB □		90%			86%			81%		
SG9KC □	90%			86%			81%			


[Table 4]

The efficiency of Inter-decimal gearhead is 81%.

□ with gearhead model name represents the value of the gear ratio.

4. Assembly

4.1 Assembly a Gear Motor

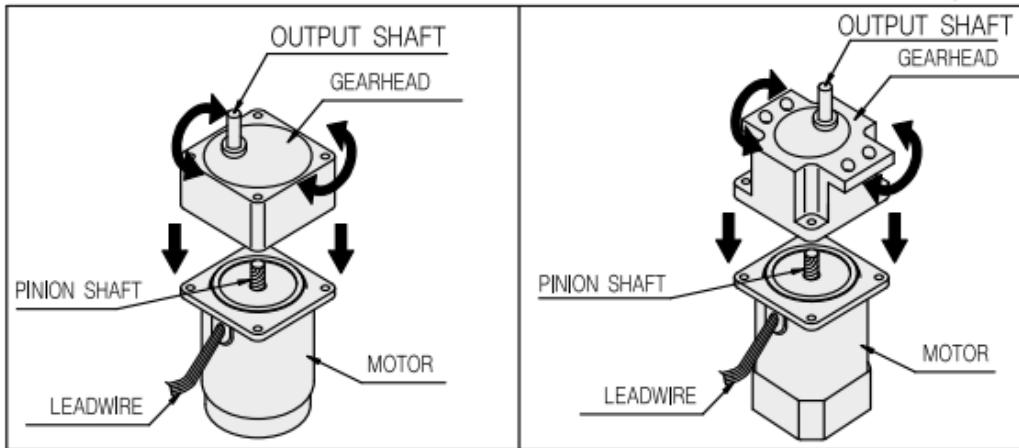

[Figure 3]

[Note]

Do not attempt to forcefully assemble the gearhead and motor.

It may cause abnormal noises or shorten the life of the gearhead.


- Place the gearhead & motor faced upward and orient the motor with consideration to the direction of the lead wire to the equipment
- Insert the gearhead output shaft onto the motor pinion shaft.
- Align the motor flange mounting holes with the gearhead flange.
- Ensure that the tip of the motor does not make contact with the teeth of the gearhead, and slightly turn the motor pinion clockwise and counterclockwise gently during assembly.
- Use the screws provided with gearhead to assemble the gear motor.

4.2 Mounting a Gear motor

- Drill holes in the mounting plate
- Align the gearhead and motor prior to mounting
- Assemble the gearhead and motor using the screws provided by the gearhead and connect onto the mounting plate
- The maximum thickness of the mounting plate is 5mm(0.2 in.)
- Secure all parts tightly by closing all gaps between the motor flange surface and the gearhead surface
- Refer to the gearhead operation manual for further details concerning mounting


[Note]

For the gearhead of S9KC□B-S, S9KD□B, or S9KH□B, separate screws must be purchased to attach these models to the mounting plate.

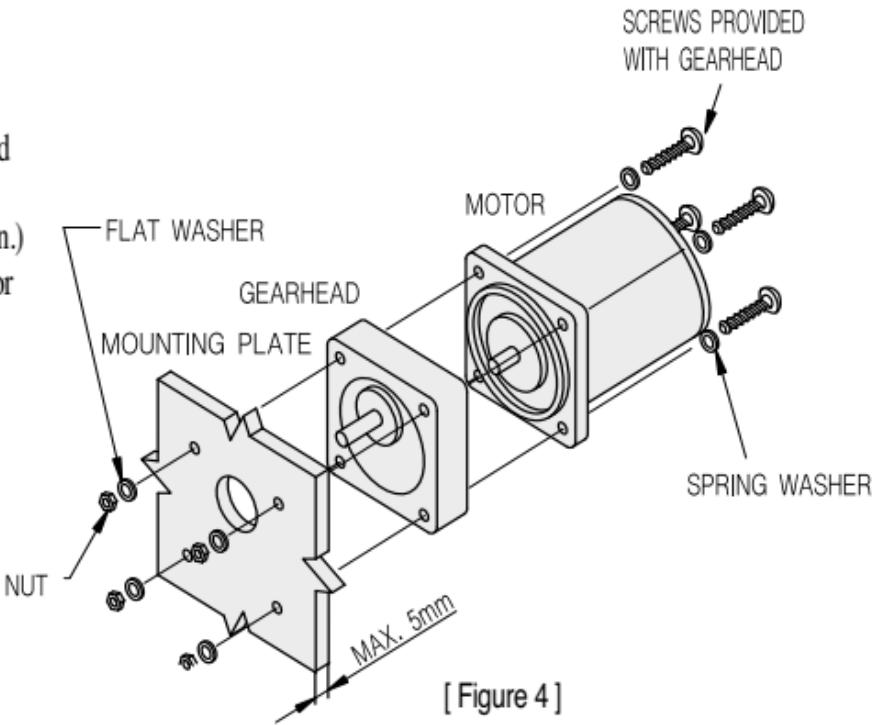

[Figure 4]

4.3 Mounting a Gear Motor with inter-decimal gearhead

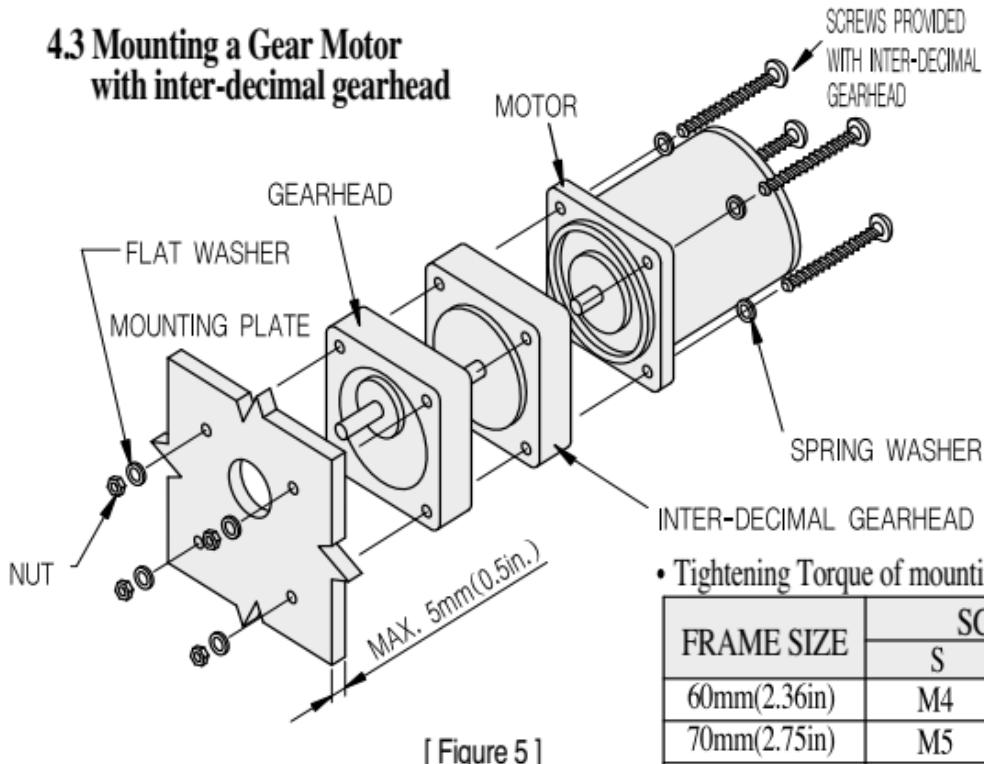

[Figure 5]


- Use the screws provided with the inter-decimal gearhead to secure all parts tightly by closing all gaps between the motor flange surface, the recessed area of decimal gearhead, and the gearheads recessed area to the mounting plate surface.
- Forced assembly of the motor and gearhead may cause erroneous noise and/or shorten the lifespan of the product. It may also cause scratches on the flange and damage the motor.
- Decimal gearhead is only available as a separate option (sold separate).

• Tightening Torque of mounting Screws and Size

[Table 5]



FRAME SIZE	SCREW		TIGHTENING TORQUE
	S	SG	
60mm(2.36in)	M4	M4	2.0N·m(20kgf·cm)
70mm(2.75in)	M5	M6	2.5N·m(25kgf·cm)
80mm(3.15in)	M5	M6	2.5N·m(25kgf·cm)
90mm(3.54in)	M6	M8	3.0N·m(30kgf·cm)

4.4 Attaching Transmission Parts

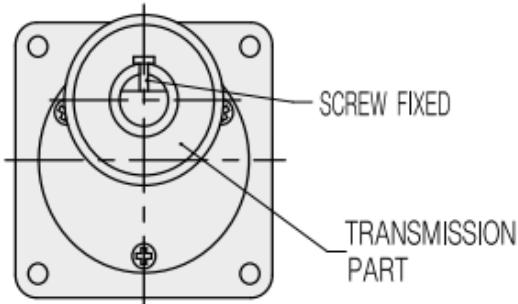

[Figure 6]

- For a flat-shaft gearbox, use a locking screw to avoid movement as shown in Figure 6.
- With a key typed output shaft of gearbox, the gearbox shaft is machined to an outer diameter tolerance of $h7$, and a key slot, as well as a key, is available to connect the transmission part as shown in Figure 7.
- Use the key provided with the gearbox to connect the transmission parts, such as the chain, pulley, or sprocket to prevent them from disengaging.

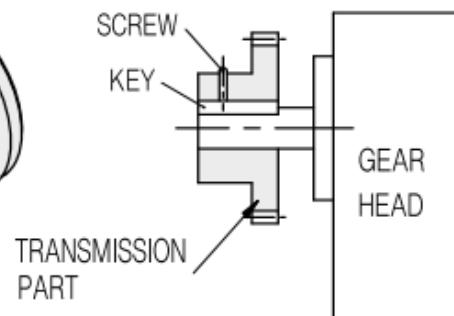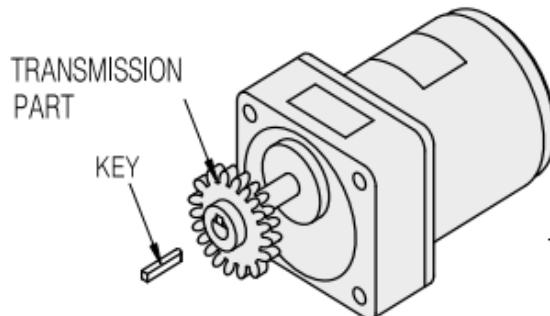


[Figure 7]


[Note]

Excessive impact or hammering of the transmission part can cause gearbox or motor damage and/or shorten the lifetime of the gearbox.

4.5 Mounting onto Brackets

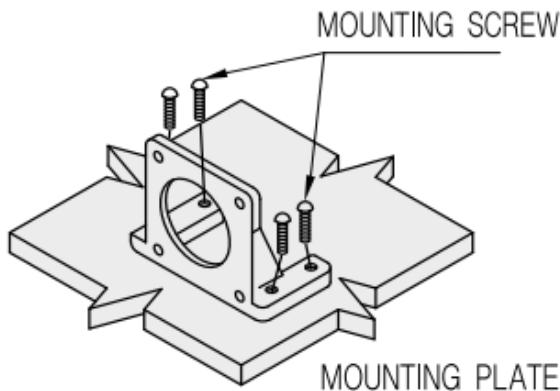

[Figure 8]

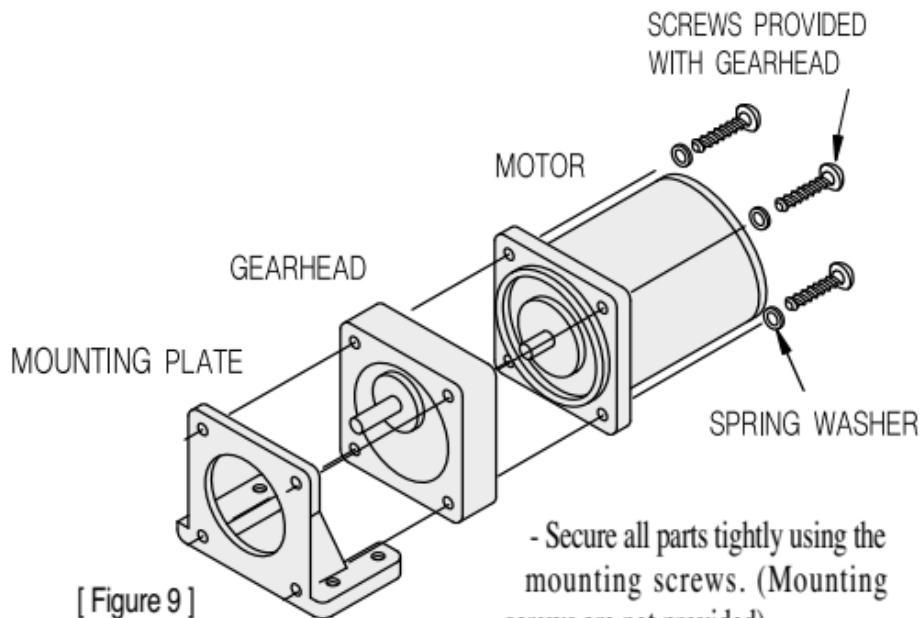

- Secure all parts tightly using the mounting screws. (Mounting screws are not provided)
- Ensure to close all gaps between the motor, gearhead and mounting plate surface. Forced assembly of motor and gear head may cause erroneous noise and/or shorten the lifespan of the product. It may cause scratches on the flange and damage the motor.

5. Troubleshooting

When the motor is not operating properly, inspect any problems by referring to the table below. If the problem persists, or symptoms not covered in the list occur, contact SPG customer services or the nearest sales office. Do not disassemble the motor.

Symptom	Things to Check
Motor does not rotate or rotates slowly	<ul style="list-style-type: none"> ① Is the correct voltage applied to the motor? ② Are the lead wires connected correctly and firmly? ③ Is the load too large? ④ Is the capacitor connected correctly as per the wiring diagram and does the capacitor's capacitance match what is stated on the motor's name plate?
Motor rotates in a wrong direction	<ul style="list-style-type: none"> ① Are the lead wires connected correctly? ② The gearhead output shaft rotates depending on the gear ratio of the gearhead. Refer to the gearhead operating manual. ③ Is the capacitor connected correctly as per the wiring diagram and does the capacitor's capacitance match what is stated on the motor's name plate?

Abnormal noise	<ul style="list-style-type: none"> ① Are the motor and the gearhead mounted correctly? ② Is the connected gearhead the same output shaft type as the motor pinion shaft?
Gearhead Output shaft stops	<ul style="list-style-type: none"> ① Is the motor a TP (thermal Protection) type motor? ② Is the transmission attachment damaged or not connected properly? ③ Do the motor or gearhead reach their life expectancy? ④ Does the output shaft break down? If so, check if the overhung load is too large and refer to Table 3. ⑤ If it stops while the motor runs, the gear may be damaged due to overloading. Please check the 'Permissible Torque of Gearhead' as shown in Table 3.

6. Warranty Information

6.1 Warranty Period

The SPG limited warranty plan covers the product in the event it fails to operate properly due to defects in material or workmanship. The warranty period shall exist for a period of twelve (12) months from the date of operation provided, or eighteen (18) months from the purchase date of SPG products; whichever period is shorter.

6.2 Warranty Limit

SPG products and parts thereof have been used under normal operating conditions, or under such conditions specified by the Company, SPG.

If any defects appear during the warranty period, SPG shall repair or replace the product under this limited warranty.

This warranty does not cover:

- a) Misuse, including unsuitable handling of the product
- b) Modification, or repair done by anyone without the permission of SPG
- c) Damages not resulting from quality of product itself
- d) Accident, lighting, or natural causes that do not come under SPG control.

The SPG warranty herein means the warranty of the product. SPG shall not be liable for consequential or incidental damage arising from the failure of any product to operate properly.

- The Specifications or designs of SPG products can be changed without any prior notice due to product modification and development.
- CAD drawings are available for download at our website, if needed.

◆ Visit our website www.spg.co.kr for SPG sales representatives or distributor contact information.



SPG Co., Ltd.

<http://www.spg.co.kr>

■ Head office
45, Cheongneung-daero, 289beon-gil, Namdong-gu,
Incheon, Korea (67B 12L, Namdong complex, Gojan-dong)
TEL : 82-32-820-8271~5 FAX : 82-32-821-0383


■ SPG USA, Inc.
501 Lively Blvd. Elk Grove Village, IL 60007 USA
TEL : 1-847-439-4949 FAX : 1-847-439-4940

GEAR HEAD

〈目 次〉

- | | |
|--------------------|-------------|
| 1. 製品受け取り時の確認 | P. 31 |
| 2. 製品の特徴 | P. 34 |
| 3. 注意事項 | P. 34 |
| 4. 製品の設置及び組立て | P. 38 |
| 5. オプション品との組立て | P. 42 |
| 6. 正常に作動しない場合の点検項目 | P. 43 |
| 7. アフターサービスのご案内 | P. 44 |

SPGの製品をお買い上げいただきまして誠にありがとうございます。
本製品をお使いの前に必ず使用説明書を読み、
製品に対する知識、安全、注意事項全般について
熟知した上で正しくご使用ください。
この説明書はいつでもご覧になれますよう、必ず
保管しておいてください。

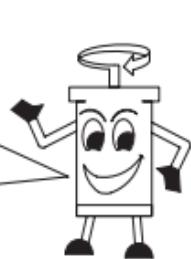

1. 製品受取り時の確認

1.1 製品の確認

次の部品が全て揃っているか確認してください。
萬一部品が足りなかつたり、破損している場合は、本社営業部または代理店へご連絡ください。

- ・減速機 1台
- ・取付け用ねじ、ナット、平ワッシャー、 各4個
スプリングワッシャー
- ・平行 キー 1つ
(出力軸キー溝加工しないものには入っていません。)
- ・使用説明書(本冊子) 1部

1.2 組立て用ねじのサイズ表

• S series




サイズ	機種名	減速比	ボルトの長さ	種類	
□ 60mm	S6KT□B	3~18	M4°P0.7°L45	丸型 BOLT	
		20~250	M4°P0.7°L55		
	S6KA□B	3~18	M4°P0.7°L50		
		20~250	M4°P0.7°L60		
	S6GX10B	10	M4°P0.7°L90		
	S7KA□B	3~18	M5°P0.8°L55		
□ 70mm		20~200	M5°P0.8°L65		
		10	M5°P0.8°L100		
□ 80mm	S8KA□B	3~18	M5°P0.8°L55	六角穴 BOLT	
		20~200	M5°P0.8°L65		
	S8GX10B	10	M5°P0.8°L100		
□ 90mm	S9KB□BL(H)	3~18	M6°P1.0°L75	六角穴 BOLT	
		20~200	M6°P1.0°L85		
		10	M6°P1.0°L122		
	S9KC□BL(H)	3~200	M6°P1.0°L95		
	S9KC□BL(H)-S	3~200	M6°P1.0°L25		
	S9KD□B	3~200	M6°P1.0°L20		
	S9GX10B-S	10	M6°P1.0°L130		
	S9KH□B	3~200	M6°P1.0°L20		

• SG series

サイズ	機種名	減速比	ボルトの長さ	種類
□ 60mm	SG6KA□	5~25	M4°P0.7°L50	六角穴 BOLT
		30~120	M4°P0.7°L55	
		150~360	M4°P0.7°L60	
□ 70mm	SG7KA□	5~120	M6°P1.0°L70	六角穴 BOLT
		150~360	M6°P1.0°L75	
		5~25	M6°P1.0°L65	
□ 80mm	SG8KA□	30~120	M6°P1.0°L70	六角穴 BOLT
		150~360	M6°P1.0°L75	
		5~18	M8°P1.25°L75	
□ 90mm	SG9KB□	20~100	M8**P1.25°L90	六角穴 BOLT
		120~300	M8**P1.25°L95	
		5~15	M8**P1.25°L75	
□ 90mm	SG9KC□	18~40	M8**P1.25°L90	六角穴 BOLT
		50~200	M8**P1.25°L100	

1.3 キー及びキー溝のサイズ(単位mm)

   - S series

□ 60		
□ 70 □ 80 □ 90 (40W)		
□ 90 (60~200W)		

- SG series

□ 60 □ 70		
□ 80		
□ 90		

お買い上げの製品に合ったキーが入っているか確認し、異常のある場合はすぐにお買い上げ店へお問い合わせください。



2. 製品の特徴

2.1 製品の特徴

2.1.1 減速機とは

- ・ギアを利用した速度変換器のことで、駆動源(モーター)の回転数を必要な回転数に減速させると同時に、大きなTORQUEを得ることができます。

2.1.2 減速機の特徴

- ・小型で伝達能力が大きいです。
- ・すべることがなく、減速比が非常に一定です。
- ・減速比を広範囲で選びます。 •耐久性があります。

2.1.3 減速比

- ・互いに噛合う歯車において被動歯車の歯数を駆動歯車の歯数で割った値です。当社で駆動源(モーター)のシャフトと減速ギアをヘリカルギアに精密加工したものを従来の減速機に比べると、10~15dBという大幅な騒音を低めることができました。

3. 注意事項


3.1 使用上の注意事項

3.1.1 使用条件

- ・使用時の周囲温度範囲は-10°C~+40°C、湿度は85%以下の場所で使用してください。
- ・直射日光や水分、油分の多い場所は避けてください。
- ・震動、衝撃のひどい場所や埃の多い場所、引火性ガスの周辺、腐食性ガスが発生する場所は避けてください。



3.1.2 OVERHUNG荷重とTHRUST荷重

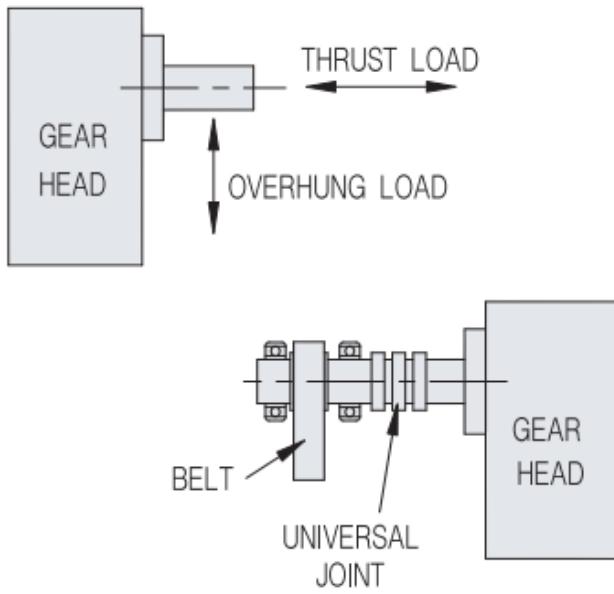

(図3-1)

- ・伝達器具にHELICALギア、WORMギアなどを使う場合、OVERHUNG荷重とTHRUST荷重の許容値を超えないようにしてください。
- ・また、出力軸に直接負荷を連結して使う場合、偏荷重のため、減速機の近くに負荷を取り付けてください。

(図3-1)のようにOVERHUNG荷重に耐えられるような構造で設置してください。
(OVERHUNG荷重の計算式はカタログを参考にしてください。)

- ・許容荷重表は次のページにあります。



・許容OVERHUNG荷重と許容THRUST荷重表

S series

機種名	減速比	最大許容 TORQUE	許容	許容
			荷重	荷重
		kgf·cm	kg	kg
S6DT□B	3~18	0.5~3	5	3
	20~250	3~15		
S6DA□B	3~18	1~6	6	3
	20~250	6~30	15	
S7KA□B	3~18	3~18	10	4
	20~200	20~50	20	
S8KA□B	3~18	2~25	12	5
	20~200	30~80	24	
S9KB□B()	3~18	4~40	30	10
	20~200	40~100	37	
S9KC□O	3~10	8~40	45	15
	12.5~20	40~80	52	
S9KC□B0-S	25~60	50~200	60	15
	75~200			
S9KD□B S9KH□B	3~200	18~300	55	

SG series

機種名	減速比	最大許容 TORQUE	許容		許容 荷重
			出力軸の先 端から10mm	出力軸の先 端から20mm	
		kgf·cm	kg	kg	kg
SG6KA□	5~9	60	10	15	4
	10~25		15	20	
	30~360		20	30	
SG7KA□	5~9	100	15	20	8
	10~25		20	30	
	30~360		30	40	
SG8KA□	5~9	160	20	25	10
	10~25		30	35	
	30~360		45	55	
SG9KB□	5~9	300	40	50	15
	10~25		45	60	
	25~300		50	70	
SG9KC□	5~9	400	40	50	15
	10~25		45	60	
	25~200		50	70	

3.1.3 減速機の最大許容TORQUE

- ・減速機の出力TORQUEは、減速比に比例しますが、ギアの材質などその他の条件によって、減速機に及ぼす許容 TORQUE が限定されます。それを最大許容 TORQUEといい、減速機の大きさ、減速比によって、規定しています。
- ・例えば、インダクションモーター40Wと減速比1/100を結合すると、S9140GBの定格TORQUEは2.5kg·cmですから、

$$T_G = T_M * i * \eta = 2.5 * 100 * 0.66 \\ = 165 \text{kg} \cdot \text{cm} \text{となります。}$$

T_G : GEAR HEADの出力TORQUE

T_M : MOTORのTORQUE

 
i : GEAR HEADの減速比

η : GEAR HEADの伝達効率

しかし、計算上では165kg·cmであっても、S9KB100Bの最大許容は100kg·cmと規定します。

• GEAR HEADの伝達効率及び回転方向

(中間減速機の伝達効率は81%です。)



S series

減速比 機種名	3~10	12.5~18	20	25~40	50	60	75~200	250
S6DA□B								
S7KA□B	81%			73%			66%	
S8KA□B								
S9KB□BH(L)								
S9KC□BH(L)	81%							
S9KD□B	81%		73%			66%		59%
S9KH□B								


SG series

減速比 機種名	5~18	20	25	30~60	75~100	120	150~200	250~300	360
SG6KA□									
SG7KA□				90%			86%		81%
SG8KA□									
SG9KB□		90%			86%			81%	
SG9KC□	90%				86%			81%	


4. 製品の設置及び組立て

4.1 モーターと減速機の組立て方

- 一般の減速機

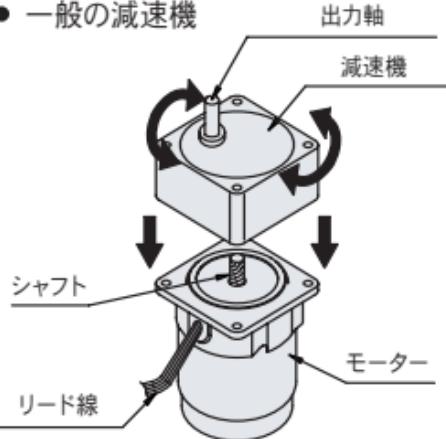


- FLANGE減速機

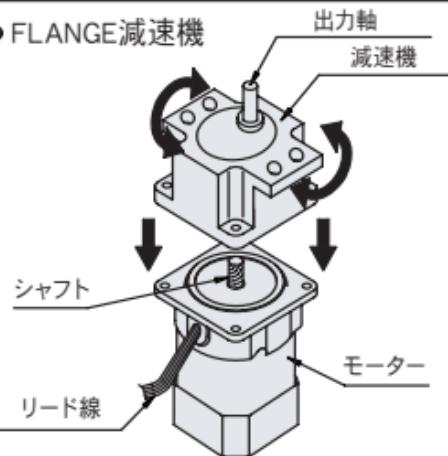

注意

モーターと減速機を無理に組立てたり減速機に金属の破片などの異物質が入ると、シャフトの歯切部やギアに傷ができ、異常音が発生したり寿命が短くなるなど、思いがけない事故の原因になりますので、特別に気をつけてください。

- ① モーターシャフト部を上にしてモータのリード線が出ている方向と減速機の出力軸方向を見て組立て位置を確かめください。
- ② モーターのシャフト部ギアと減速機内部のギアが強く触れたりぶつかったりしないように、減速機を左右に少しづつ回転させながらゆっくり組立ててください。
- ③ モーターと減速機のセットを組立てる場合、付属の設置用ねじをお使いください。

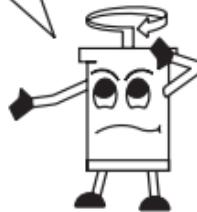


4.2 設置する時の注意

- ・設置台に穴を開け、減速機付属ねじ4つを使ってモーターと減速機を設置面に固定させてください。この時、モーターFLANGE面と減速機組立て面に隙間がないよう気をつけてください。
- ・減速機とモーターをセットで接続する場合、付属の組立て用ねじを使ってください。
組立て台の厚さは、ねじの結合長さを十分にするため、5mm以下にしてください。




注意
S9KC□B-S、S9KD□B、
S9KH□Bは、モーターとの組
立てねじのみ付属品として入
っていますので、設置面との
組立てには別途のねじをご準
備ください。


- ・一般のGEAR HEADのみを組立てる場合

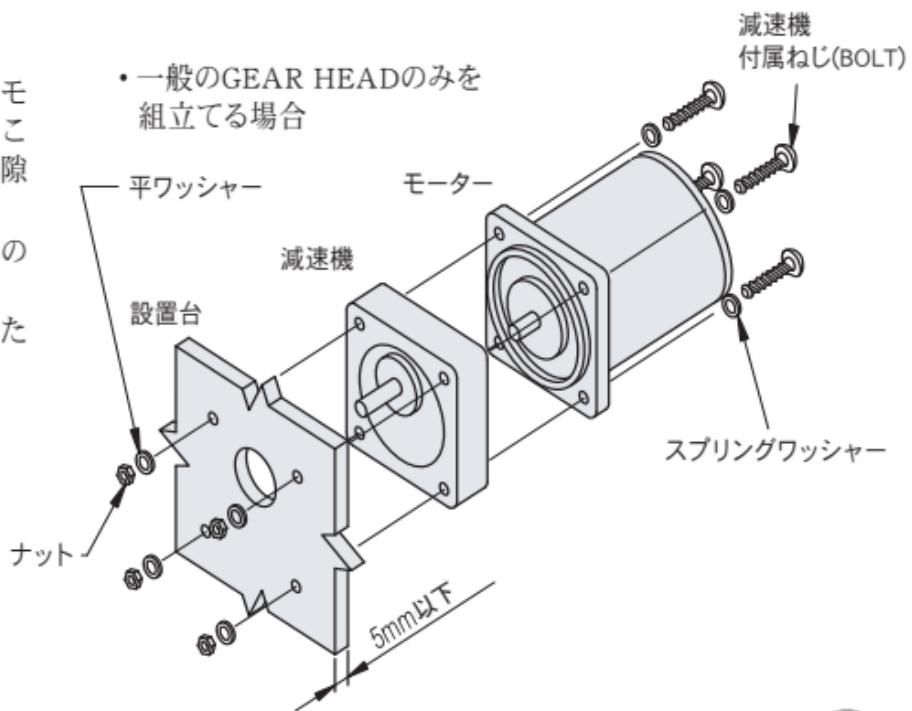

- 一般的の減速機と中間減速機を全部組立てる場合

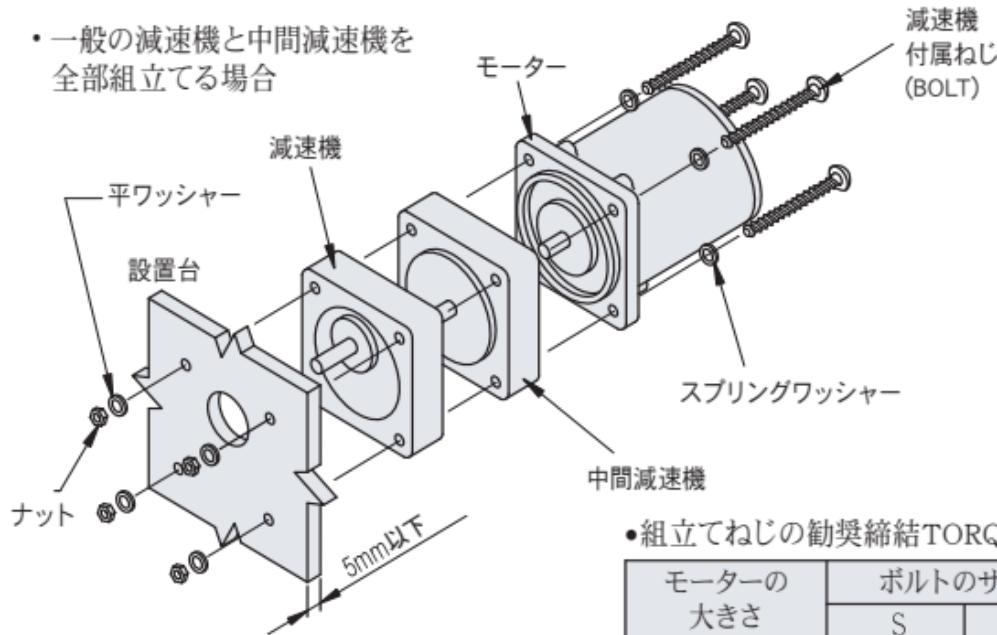


中間減速機の製品出荷時、ねじは高減速比用サイズ1種類のみ包装しますので、減速機の厚さによって、別途の組立てねじをご準備ください。

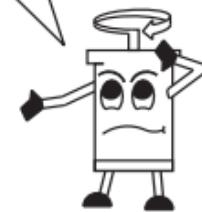


・組立てねじの勧奨締結TORQUE

モーターの 大きさ	ボルトのサイズ		勧奨締めTORQUE
	S	SG	
□ 60	M4	M4	2.0N·m (20kgf·cm)
□ 70	M5	M6	2.5N·m (25kgf·cm)
□ 80	M5	M6	2.5N·m (25kgf·cm)
□ 90	M6	M8	3.0N·m (30kgf·cm)


4.3 伝達部品の固定方法

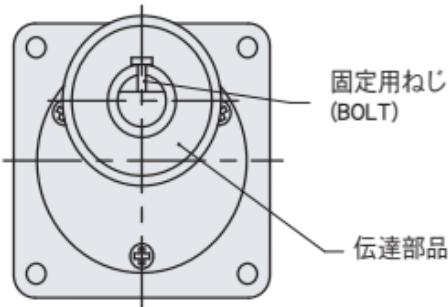

- ・減速機の出力軸は、外径公差をh7として伝達部品の組立てのためのキー溝またはD-CUT加工があります。
- ・D-CUT加工の場合、D-CUT加工部に負荷が空周りしないようにねじを使ってしっかりと固定してください。
- ・キー溝加工の場合、伝達器具であるCHAIN、PULLEY、SPROCKETなどにキー溝を加工して、付属のキーを使って固定してください。

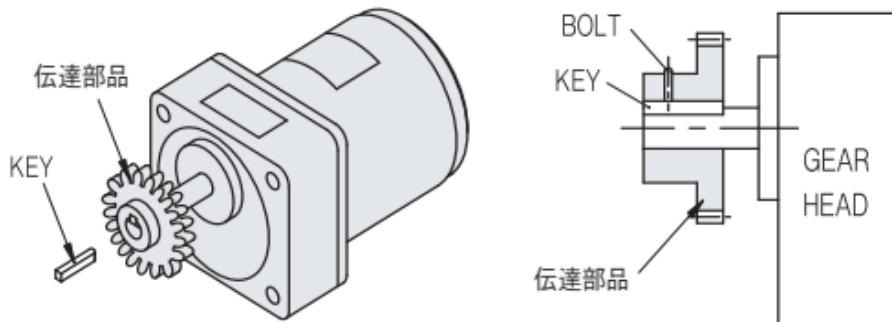


注意
減速機軸に伝達器具を固定させる時、衝撃を加えると、減速機が破損したり寿命が短くなるなどの原因となりますので、特に注意してください。

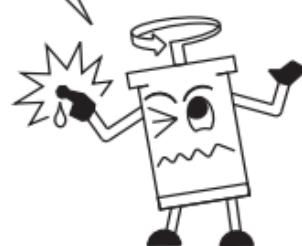


5. オプション品との組立て

5.1 取付け台の組立て

5.1.1 取付プレートの設置

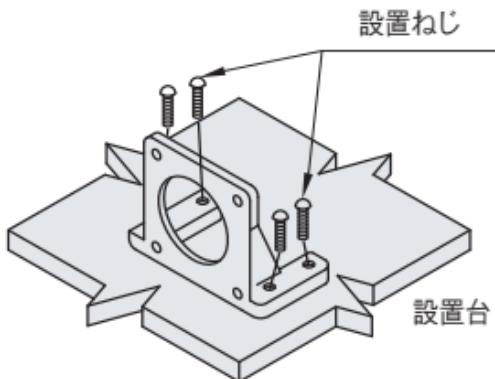

5.1.2 ギアモーターとの組立て

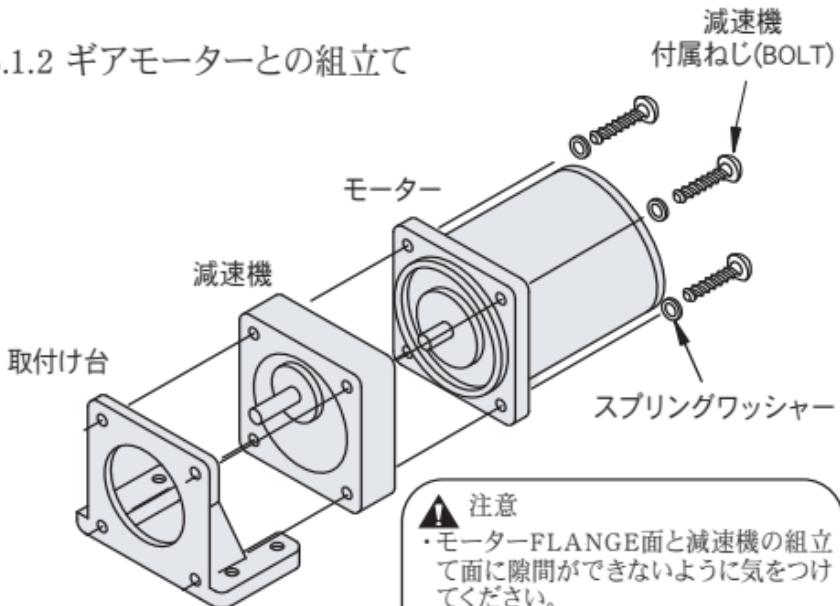

注意

- ・モーターFLANGE面と減速機の組立て面に隙間ができないように気をつけてください。
- ・モーターのシャフト部ギアと減速機内部のギアが強く触れたりぶつかったりしないように気をつけてください。
- ・モーターの動作時に騒音の原因になります。


6. 正常に作動しない場合の点検項目

- モーター及び減速機が正常に作動しない場合、下の表を参考に点検してください。点検結果が全て正常であるのにもかかわらずモーターがきちんと作動しない場合、修理・分解・改造せず、お近くの本社営業部や代理店へご連絡ください。

現象	確認内容
出力軸が回転しない。 または、回転が遅い。	<ul style="list-style-type: none"> ① モーターに定格電圧が加わっていますか? ② 電源が正しく連結されていますか? ③ 負荷が大きすぎてはいませんか? ④ 付属キャパシターまたはラベルに記載されている容量のキャパシターが結線図通りに接続されていますか?
逆方向へ回転する。	<ul style="list-style-type: none"> ① 結線図とは違う接続の仕方をしていませんか? 結線図をもう一度確認してください。 ② 減速機の減速比によって、減速機出力軸の回転方向が違ってきます。 ③ 見る方向が間違っていないですか? モーター出力軸から見た時の回転方向を時計回り、または反時計回りと規定しています。

異常音がする。	<ul style="list-style-type: none"> ① モーターと減速機を正しく装着してありますか? 減速機の使用説明書を参考にしてください。 ② モーターと同じ歯切シャフトタイプ減速機を装着していますか?
異常なく回転していた出力軸が急に止まった。	<ul style="list-style-type: none"> ① モーターがTHERMAL PROTECTOR(T.P.)付着タイプではないですか? ② 伝達器具であるPULLEYなどが破損していたり、連結部が緩んでいませんか? ③ モーターまたは減速機の寿命が切れていませんか?(寿命はカタログ参照) ④ 出力軸が破損していないませんか?(もし破損していたら、過度なOVERHANG荷重の可能性があります。[3. 使用上の注意事項]を参考にして再検討してください。) ⑤ モーターは回転するのに減速機が回転しないのであれば、ギアが損傷している可能性があります。(もし損傷していたら、減速機の許容TORQUE以上に過負荷が作用したためです。[3.1.2 減速機の許容TORQUE]を参考にして再検討して下さい。)

7. A/S(アフターサービス)のご案内

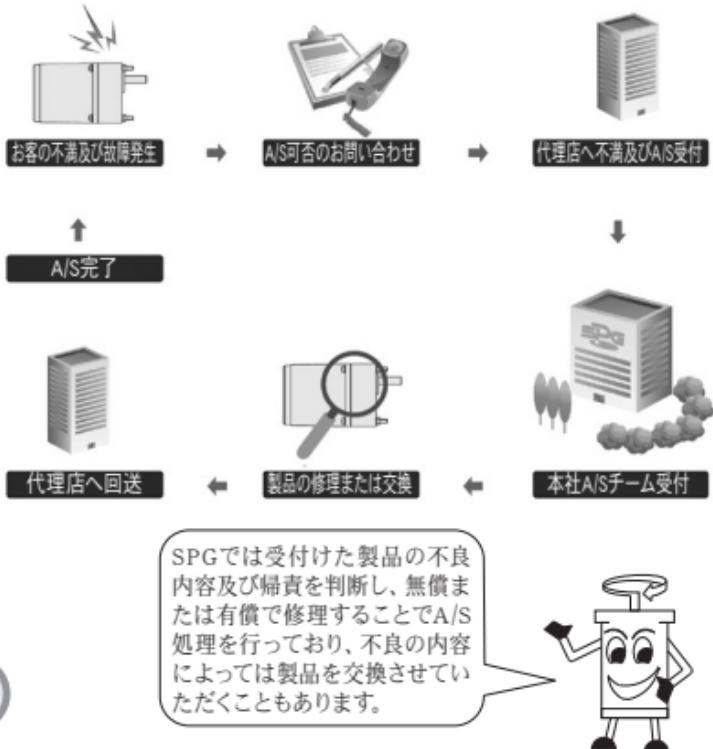

* 代理店のご案内

各地域の代理店はSPGホームページ
(www.spg.co.kr)でご確認ください。



◎ お買い上げ製品のCAD図面は、
ホームページにてダウンロードできます。

※ 製品の性能改善のため、仕様及び外観はお客様へのお知らせすることなく変更することがあります。
その他、お問い合わせは本社技術研究所、営業部へご連絡ください。



SPG Co., Ltd.

<http://www.spg.co.kr>

■本社

仁川広城市南洞区清陵大路289番路45
(古桟洞、南洞工業団地67B12L)

TEL: 82-32-820-8271~5 FAX: 82-32-821-0383

GEAR HEAD


〈目 录〉

- 1. 接收产品时的确认事项 ······ P. 45
- 2. 产品的特征 ······ P. 48
- 3. 注意事项 ······ P. 48
- 4. 产品安装及组装 ······ P. 52
- 5. 与选配品的组装 ······ P. 56
- 6. 非正常启动下的检查项目 ······ P. 57
- 7. A/S步骤介绍 ······ P. 58

谢谢您购买SPG产品。

使用本产品之前必须仔细阅读使用说明书，熟悉产品相关的知识、安全知识和注意事项以后才能正确使用本产品。

为了便于随时参考，阅读之后请务必保管在指定的位置。

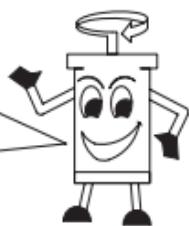

1. 接收产品时的确认事项

1.1 确认产品

确认是否具备如下零部件。

如果缺少或已经破损，请与营业部或代理店联系。

- 减速机(GEAR HEAD) ······ 1台
- 对接用的螺栓、螺母、平垫圈、弹簧垫圈 ··· 各1个
- 平行KEY ······ 1个
(在出力轴上没有键槽的减速机不附带平行KEY)
- 使用说明书(本说明书) ······ 1本

1.2 用于组装的螺栓尺寸表

- S series

大小	品名	减速比	螺栓长度	种类
□ 60mm	S6KT □ B	3~18	M4°P0,7°L45	圆头 BOLT
		20~250	M4°P0,7°L55	
	S6KA □ B	3~18	M4°P0,7°L50	
		20~250	M4°P0,7°L60	
	S6GX10B	10	M4°P0,7°L90	
	S7KA □ B	3~18	M5°P0,8°L55	
□ 70mm		20~200	M5°P0,8°L65	
		S7GX10B	10	M5°P0,8°L100
□ 80mm	S8KA □ B	3~18	M5°P0,8°L55	内六角孔 BOLT
		20~200	M5°P0,8°L65	
		S8GX10B	10	M5°P0,8°L100
□ 90mm	S9KB □ BL(H)	3~18	M6°P1,0°L75	内六角孔 BOLT
		20~200	M6°P1,0°L85	
		10	M6°P1,0°L122	
	S9KC □ BL(H)	3~200	M6°P1,0°L95	
	S9KC □ BL(H)-S	3~200	M6°P1,0°L25	
	S9KD □ B	3~200	M6°P1,0°L20	
	S9GX10B-S	10	M6°P1,0°L130	
	S9KH □ B	3~200	M6°P1,0°L20	

유간 구멍 분이
内六角孔

- SG series

大小	品名	减速比	螺栓长度	种类
□ 60mm	SG6KA □	5~25	M4°P0,7°L50	内六角孔 BOLT
		30~120	M4°P0,7°L55	
		150~360	M4°P0,7°L60	
□ 70mm	SG7KA □	5~120	M6°P1,0°L70	
		150~360	M6°P1,0°L75	
		5~25	M6°P1,0°L65	
□ 80mm	SG8KA □	30~120	M6°P1,0°L70	内六角孔 BOLT
		150~360	M6°P1,0°L75	
		5~18	M8°P1,25°L75	
□ 90mm	SG9KB □	20~100	M8**P1,25°L90	内六角孔 BOLT
		120~300	M8**P1,25°L95	
		5~15	M8**P1,25°L75	
	SG9KC □	18~40	M8**P1,25°L90	
		50~200	M8**P1,25°L100	

1.3 KEY及KEY槽尺寸图(单位mm)

• S series

<input type="checkbox"/> 60	
<input type="checkbox"/> 70 <input type="checkbox"/> 80 <input type="checkbox"/> 90 (40W)	
<input type="checkbox"/> 90 (60~200W)	

• SG series

<input type="checkbox"/> 60 <input type="checkbox"/> 70	
<input type="checkbox"/> 80	
<input type="checkbox"/> 90	

请确认采购的产品是否搭配有吻合的KEY。
如有异常请立即向购买处咨询。



2. 产品的特征

2.1 产品的特性

2.1.1 什么是减速机(GEAR HEAD)

·利用齿轮的速度变化器，把驱动源(MOTOR)的旋转数减速到所需的旋转数同时，能得到更大TORQUE的器具性装置。

2.1.2 GEAR HEAD的特征

·小型，传达扭距能力大。 ·选择的减速比范围广。
·不产生滑动，减速比正确。 ·有耐久性。

2.1.3 减速比

·相互咬合的齿轮中，把被动齿轮的齿数用主动齿轮的齿数相除的值，本公司把驱动源(MOTOR)的SHAFT和减速齿轮螺旋形精密加工的结果与原先减速机相比，实现了10~15dB的大幅度降低噪音。

3. 注意事项


3.1 使用过程中注意事项

3.1.1 使用条件

·使用时的环境温度范围是-10℃~40℃，温度是80%以下。
·应该避免直射光线或水，油较多的场地。
·应该回避震动，冲击严重的场地或灰尘多的场地，产生引火型性气体，腐蚀性气体的场地。



3.1.2 悬臂式负荷重量和插入式负荷重量

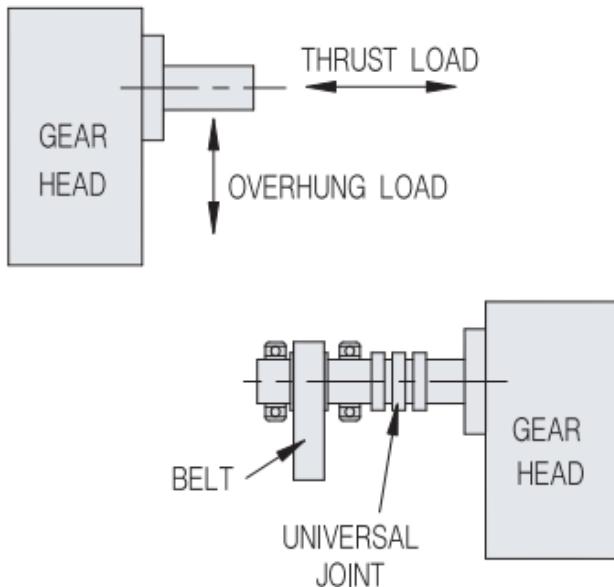

(图3-1)

- 传达扭距的器具上使用螺旋齿轮，蜗杆齿轮的情况下，应该注意不能超过悬臂式负荷重量允许值的同时也不能超过插入式符合重量的允许值。
- 并且，出力轴上直接连接负荷的情况下，由于偏心负荷重量，应该把负荷靠向减速机。

悬臂式负荷重量超过表中的值时，如(图3-1)一样设置可以承受悬臂式负荷重量的构造。(悬臂式负荷重量的计算式请参考产品样本。)

- 适用负荷表在下一页。



• 允许悬臂式负荷重量和允许插入式负荷重量表

S series

品名	减速比	最大允许 TORQUE	允许	允许
			悬臂式 负荷重	插入式 负荷重
		kgf·cm	kg	kg
S6DT□B	3~18	0.5~3	5	3
	20~250	3~15		
S6DA□B	3~18	1~6	6	3
	20~250	6~30		
S7KA□B	3~18	3~18	10	4
	20~200	20~50		
S8KA□B	3~18	2~25	12	5
	20~200	30~80		
S9KB□B()	3~18	4~40	30	10
	20~200	40~100		
S9KC□O	3~10	8~40	45	15
	12.5~20	40~80		
S9KC□B0-S	25~60	50~200	52	60
	75~200			
S9KD□B S9KH□B	3~200	18~300	55	

SG series

品名	减速比	最大允许 TORQUE	允许悬臂式负荷重		允许 插入式 负荷重
			从输出轴末端 10mm	从输出轴末端 20mm	
		kgf·cm	kg	kg	kg
SG6KA□	5~9	60	10	15	4
	10~25		15	20	
	30~360		20	30	
SG7KA□	5~9	100	15	20	8
	10~25		20	30	
	30~360		30	40	
SG8KA□	5~9	160	20	25	10
	10~25		30	35	
	30~360		45	55	
SG9KB□	5~9	300	40	50	15
	10~25		45	60	
	25~300		50	70	
SG9KC□	5~9	400	40	50	15
	10~25		45	60	
	25~200		50	70	

3.1.3 减速机的最大允许TORQUE

- 减速机的输出功率TORQUE虽然与减速比成正比。但由于减速机的材质等其它条件，所以减速机的允许TORQUE受到限制，这就是最大TORQUE，依据减速机的大小，进行减速比的规定。
- 举例，感应电机40W和减速比1/100相结合时 S9I40GB的额定TORQUE是2.5kg·cm。

$$T_G = T_M * i * \eta = 2.5 * 100 * 0.66 = 165 \text{ kg} \cdot \text{cm}$$

T _G : GEAR HEAD的动力轴 TORQUE
T _M : MOTOR의 TORQUE
i : GEAR HEAD的减速比
η : GEAR HEAD的传达效率

虽然计算值是165kg·cm，S9KB100B的最大允许TORQUE规定为100kg·cm。

• 减速机的传达效率

(中间减速机的传达效率是81%。)

S series

减速比 品名	3~10	12.5~18	20	25~40	50	60	75~200	250
S6DA(T)□B								
S7KA□B		81%		73%		66%		
S8KA□B								
S9KB□BH(L)								
S9KC□BH(L)								
S9KD□B	81%		73%		66%		59%	
S9KH□B								


SG series

减速比 品名	5~18	20	25	30~60	75~100	120	150~200	250~300	360
SG6KA□									
SG7KA□			90%		86%		81%		
SG8KA□									
SG9KB□		90%		86%		81%			
SG9KC□	90%		86%		81%				


4. 产品安装及组装

4.1 电机和减速机的组装方法

- 普通减速箱

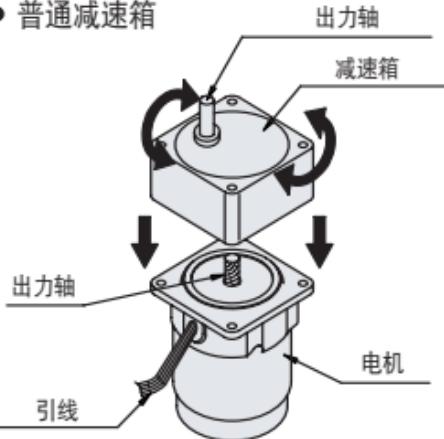


- 法兰式减速箱

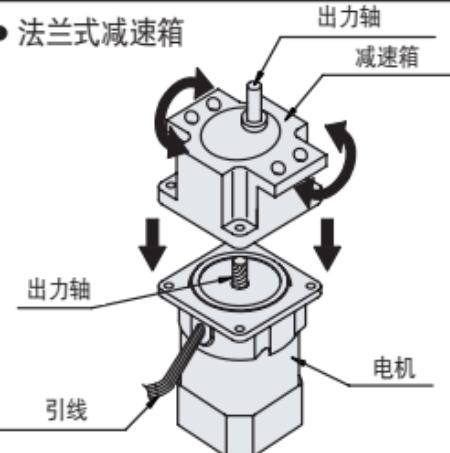

注意

过分用力组装电机和减速机或减速机内进入金属片等异物时，SHAFT齿节部分或齿轮上产生缺陷，是成为发生异常音或缩短寿命等意想不到的事故原因，因此应该格外注意。

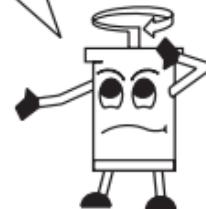


- ① 电机出力轴部分向上，选择电机的LEAD WIRE GEAR引线方向和减速机的出力轴方向的组装位置。
- ② 电机的SHAFT部分齿轮和减速机，慢慢地进行组装。
- ③ 电机和减速机的SET对接时，请使用附属品内的对接螺丝。

4.2 安装注意事项


- 在安装板上面钻孔后，使用减速机的4个附属螺丝，把电机和减速机固定在安装面上。这时，应该注意电机法兰盘端面减速机插入口端面不能产生缝隙
- 对接减速机和电机为SET时，应该使用附属品内的组装螺丝。为了使螺丝的连接有充分的长度，组装板的厚度请使用5mm以下的。




注意
S9KC□B-S, S9KD□B,
S9KH□B是中只有与电机
组装的螺丝，在组装板时
应该准备另外的螺丝。

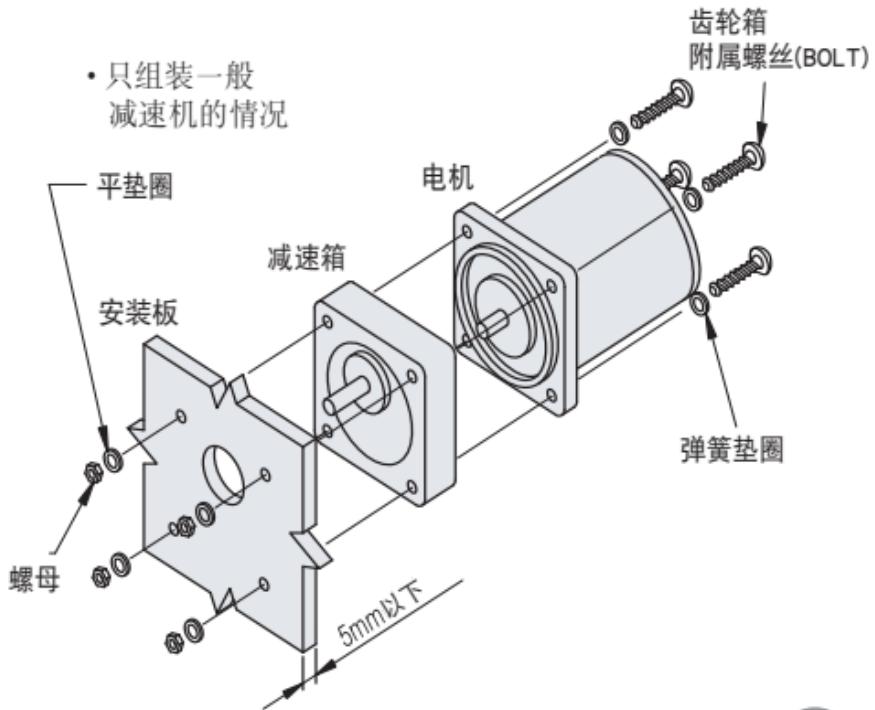

- 一般减速机和中间减速机都组装的情况

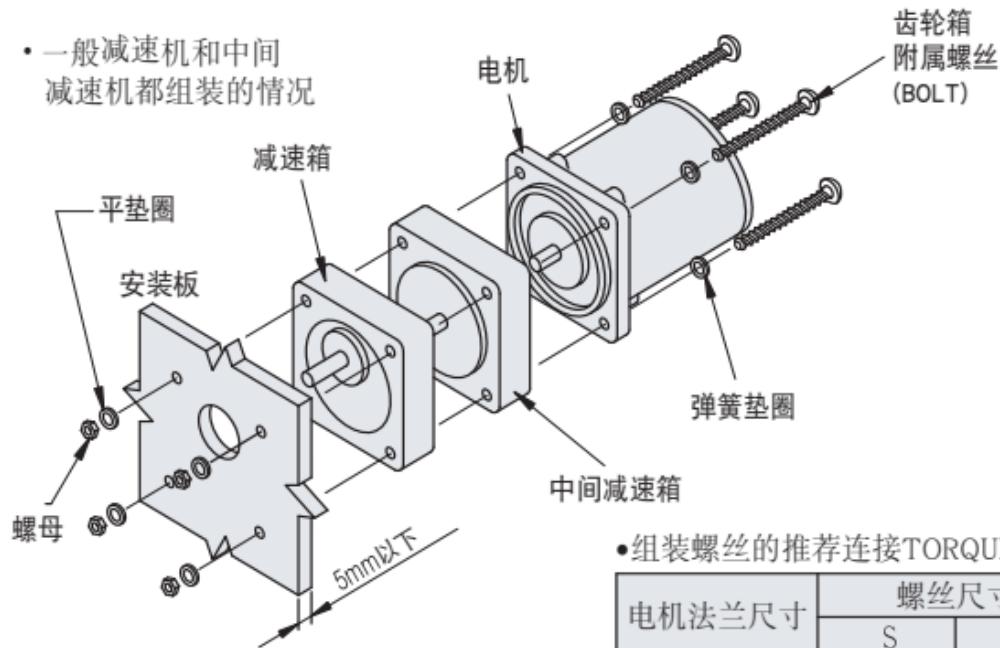


中间减速机的产品出厂时，螺丝只包装了用于高减速比 SIZE 1种，所以根据减速机的厚度请准备另外的组装螺丝。

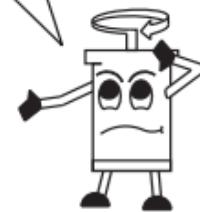



- 组装螺丝的推荐连接TORQUE

电机法兰尺寸	螺丝尺寸		推荐拧紧 TORQUE
	S	SG	
□ 60	M4	M4	2.0N·m (20kgf·cm)
□ 70	M5	M6	2.5N·m (25kgf·cm)
□ 80	M5	M6	2.5N·m (25kgf·cm)
□ 90	M6	M8	3.0N·m (30kgf·cm)


4.3 传达零部件的组装

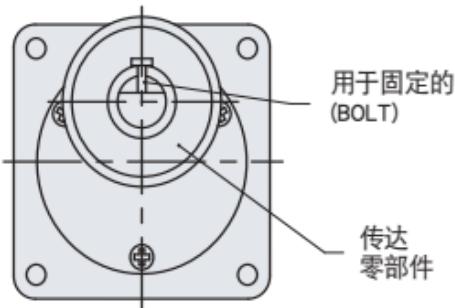

- 减速机的出力轴外径公差按照h7。
加工了组装传达零部件的KEY槽或D-CUT。
- 加工成D-CUT情况下，为了防止负荷空转，在D-CUT加工部位用螺丝进行正确的固定。
- 加工成KEY槽的情况下，传达器具-CHAIN, PULLEY, SPROCKET上面加工KEY槽，在固定附属品KEY。

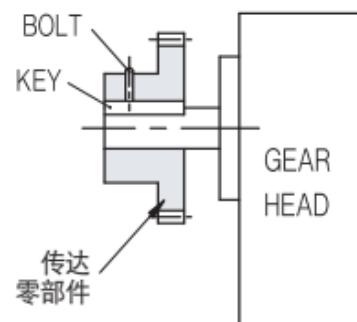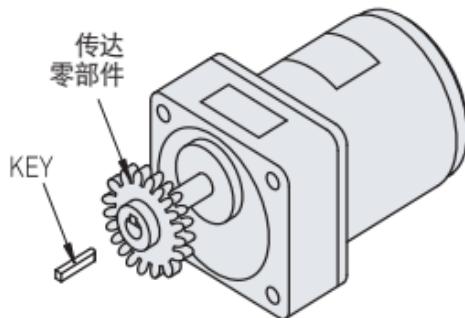


! 注意
在减速机轴上面固定传达器具时，施加冲击的可能造成，减速机的损坏，或缩短使用寿命，因此需要格外的注意。

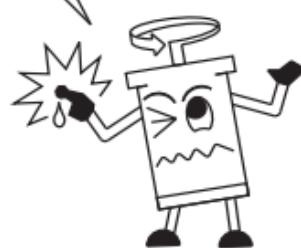


5. 与选配的组装

5.1 对与安装的配件组装

5.1.1 对接PLATE的安装

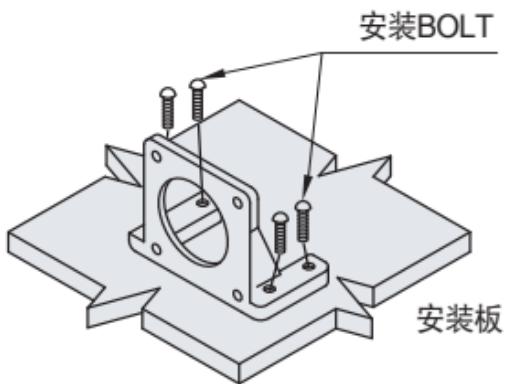

5.1.2 与减速机的组装

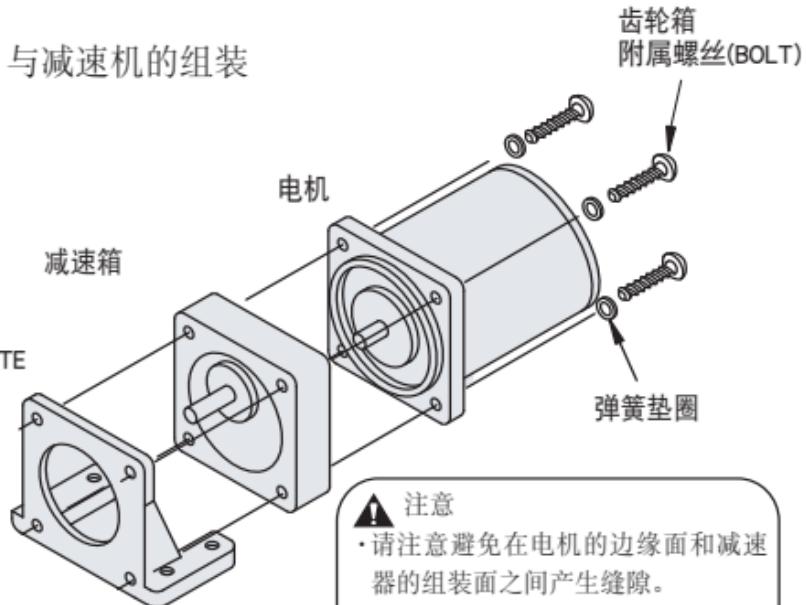

注意

- 请注意避免在电机的边缘面和减速器的组装面之间产生缝隙。
- 装配时, 请避免电机, 轴部齿轮(GEAR)和减速器内部的齿轮发生强烈抵触或碰撞。
- 启动电机时, 会导致噪音。

6. 非正常启动状态下的检查项目

·电机及减速机不能正常启动时,请参照下表进行检查。所检查的项目都正常的情况下仍然不能正常启动电机时,请不要自行修理,分解,改造,应该联系营业部或代理店。

现象	确认内容
出力轴不旋转 或, 低速旋转	<ul style="list-style-type: none">① 电机是否使用额定电压?② 与电源的连接是否正确?③ 负荷是否过重?④ 附属电容器(CONDENSER)或铭牌上记载容量的电容器是否接‘接线图’连接?
逆方向旋转	<ul style="list-style-type: none">① 接线的方法是否与‘接线图’不同?② 减速机的减速比不同, 减速机扭距轴的旋转方向发生变化。③ 察看的方向是否有错? 以电机扭距轴方向为准, 区分顺时针或逆时针。

有异常的声音	<ul style="list-style-type: none">① 电机和减速机的安装是否正确? 请参考减速机的安装说明书。② 是否安装了与电机相同齿节SHAFT TYPE的减速机?
正常旋转的动力轴突然停止转动	<ul style="list-style-type: none">① 电机是否是安装TERMINAL PROTECTOR(T/P)的TYPE?② 传达器具-PULLEY等是否损坏或连接松懈?③ 电机或减速机是否已到使用寿命? (寿命参照产品样本)④ 出力轴是否断裂? (如果是断裂, 可能是超重的悬臂式负荷重量引起。参照‘3. 使用中的注意事项’进行重新检查。)⑤ 如果电机转动, 减速机不旋转, 齿轮可能损坏。 (如果已经损坏, 原因是超过了减速机的允许TORQUE, 参照‘3.1.2 减速机的允许TORQUE’, 进行重新检查。)

7. A/S步骤介绍



SPG对受理的产品不合格内容进行判断，以免费或收费维修方式提供A/S服务，可根据不合格内容更换产品。



* 代理店介绍

各地区的代理店可以在SPG官网进行确认(www.spg.co.kr)。



◎ 需要产品CAD图纸的顾客，可以进入本公司的官网进行下载。

※ 不通知顾客的情况下，为了改善产品的性能，有可能改变规格及外观。
具体详细咨询事宜，请联系本公司技术研究所，代理店，营业部。



SPG Co., Ltd.

<http://www.spg.co.kr>

■ 总部

仁川广域市南洞区清陵大路 289番路 45
(古栈洞, 南洞工业园区67B 12L)

TEL: 82-32-820-8271~5 FAX: 82-32-821-0383

MEMO

MEMO

ISO 9001




ISO 14001




UL



CE

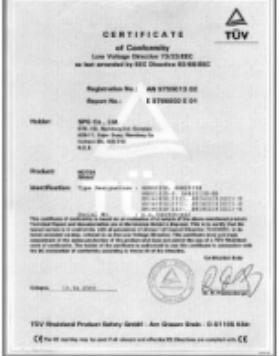

CCC

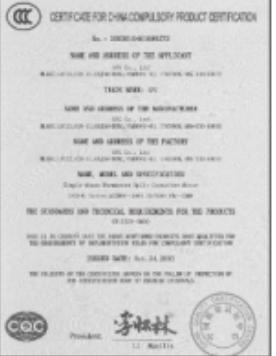

NT

Certificate of New Technology



세계일류상품인정서



Korean World-class Product Award 2002

- 위의 인증서 중에는 모든 제품에 적용되지 않는 것도 있습니다.

- There are some certifications above not relate with all the products.

USER MANUAL

21C, for world geared motor!



■ Domestic sales -Direct

45, Cheongneung-daero, 289beon-gil, Namdong-gu,
Incheon, Korea (67B 12L, Namdong complex, Gojan-dong)

☎ TEL: 82-32-820-8271~5

✉ FAX: 82-32-821-0383

■ Head office(Overseas sales dept.)

45, Cheongneung-daero, 289beon-gil, Namdong-gu,
Incheon, Korea (67B 12L, Namdong complex, Gojan-dong)

☎ TEL: 82-32-820-8240(8250)

✉ FAX: 82-32-821-3355



SPG Co., Ltd.

<http://www.spg.co.kr>